




Post Sectional & Roll-n-Float Instructions

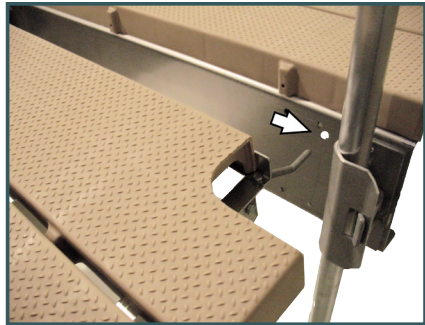


Slide 6' or 10' ramp pins into holes.
Allows ramp to angle up or down




As you walk on your V-Dock you should be able to read the logo on the decking as you walk out towards the lake.

Foot Pad Instructions

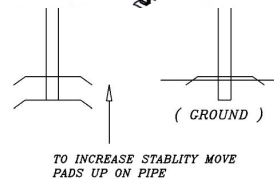

TO INCREASE STABILITY MOVE
PADS UP ON PIPE

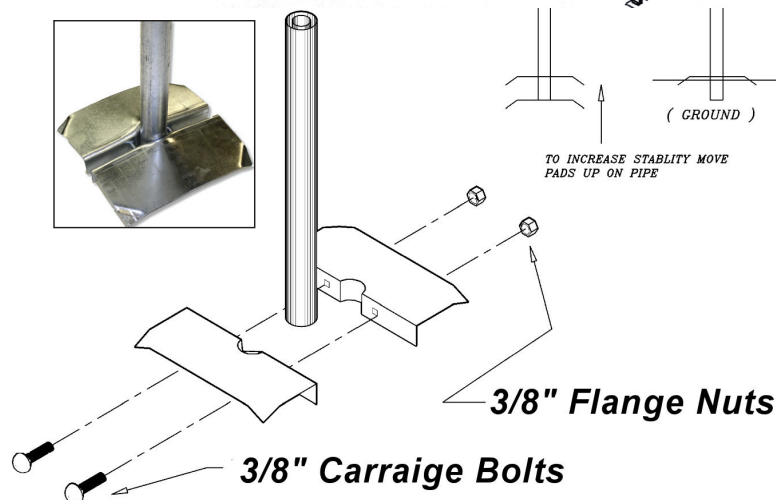


3/8" Flange Nuts

3/8" Carriage Bolts

Hanger Bracket Instructions

Hanger brackets are designed to slide in between deck boards and hook directly to V-Dock's mainframe.
Sections to be mounted in 2 foot increments.

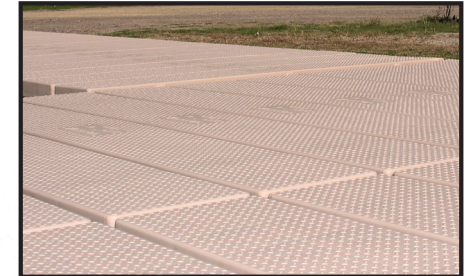



Post Bracket Instructions

Using a 3/4" wrench remove or install posts from this simple "U" shaped bracket.



Beginning Section

Longer end of the post bracket is facing inside the dock section

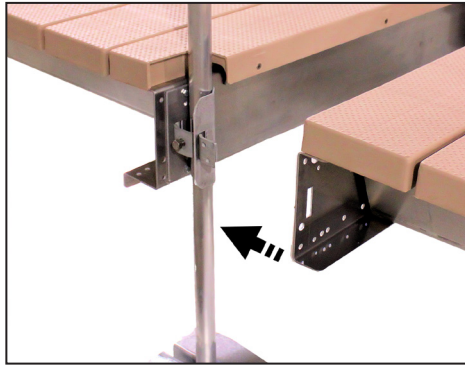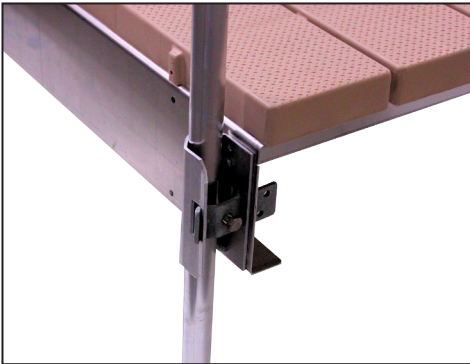

To Connect One Dock to Another

Rotatate the post bracket lug so the longer end sticks out.





Slide & Snap

Slide the square hole into the longer end of the post bracket lug. Slide snap pin into post bracket lug to keep the sections together

Last Section

Rotate lug so the longer part of the post bracket is sticking inside the

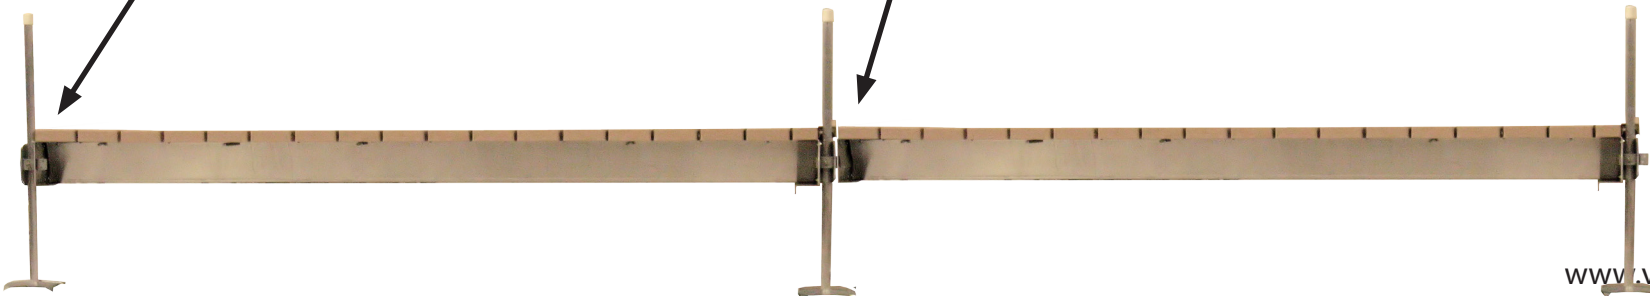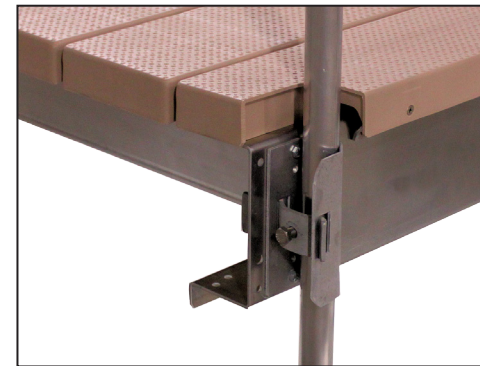



ROLL-N-FLOAT OPERATION & MAINTENACE MANUAL

READ INSTRUCTIONS COMPLETELY
BEFORE INSTALLING DOCK SECTIONS

DOCK SECTION

Note: A wood block placed underneath the end of the dock may make it easier to slide the Roll-N-Floats into the section.



4 " WOOD BLOCK



1. Hook adjustment
chain to main frame of



2. Slide Roll-N-Floats into pivot housing.

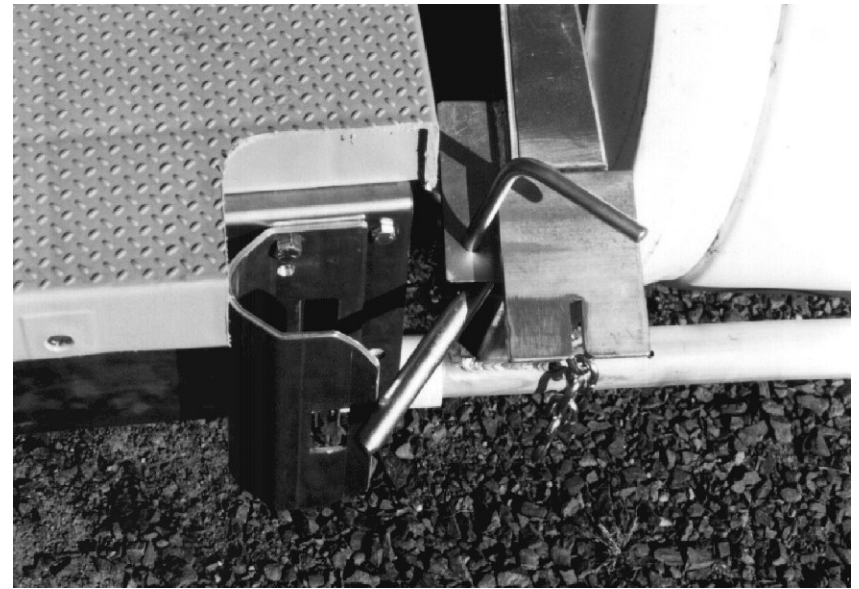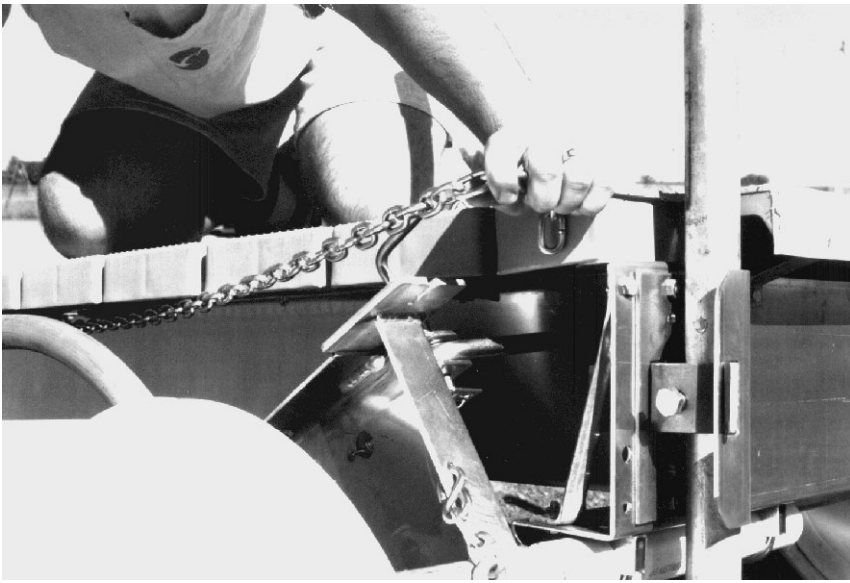

3. Install handle & rotate Roll-N-Float. Spring loaded safety latch will pivot & lock behind main frame.





4. Hook safety chain to main frame of dock.



5. Hook Roll-N-Float to desired dock height & latch adjustment




6. (Remove handle) Roll dock section into place & secure post in post bracket.

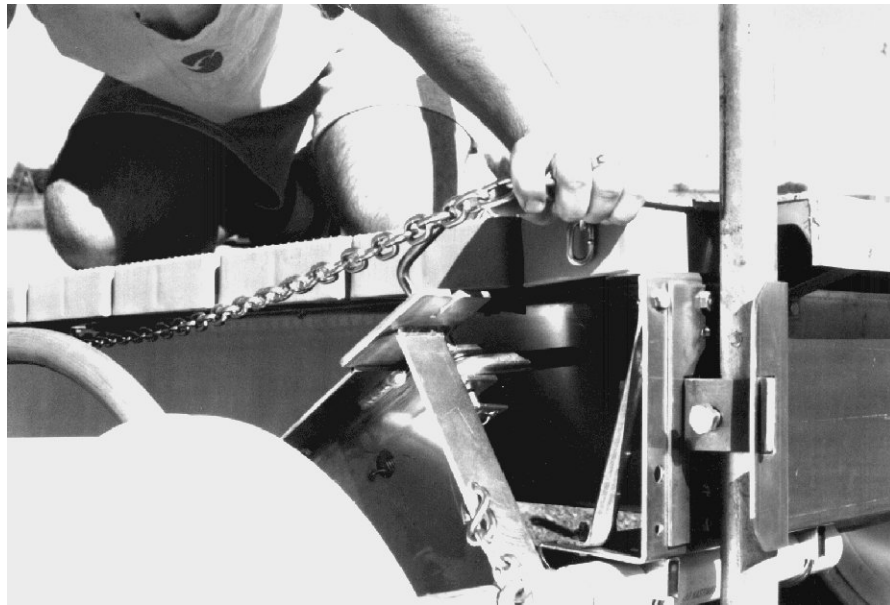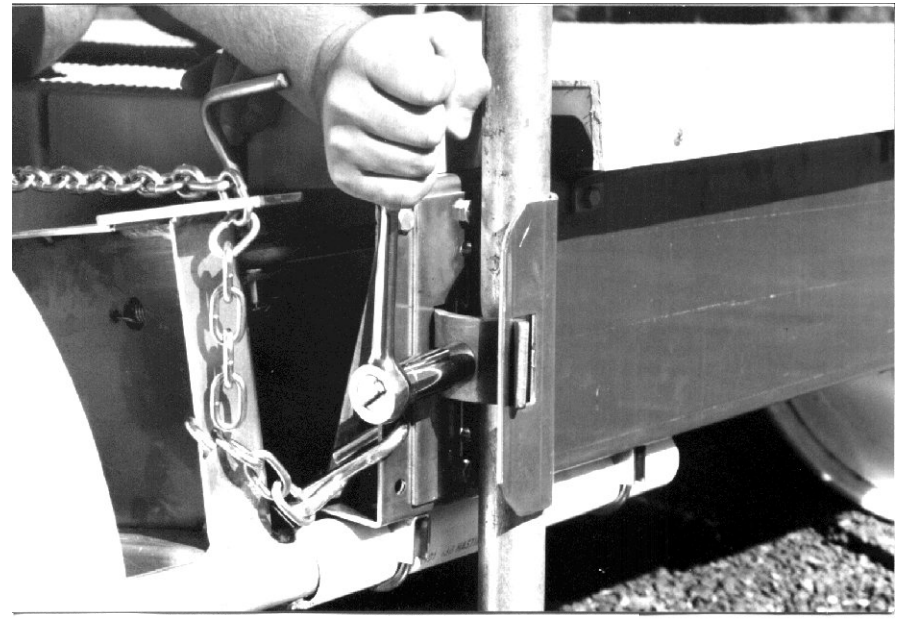

7. Install handle & rotate to release adjustment chain.




8. Unhook safety chain from main frame.

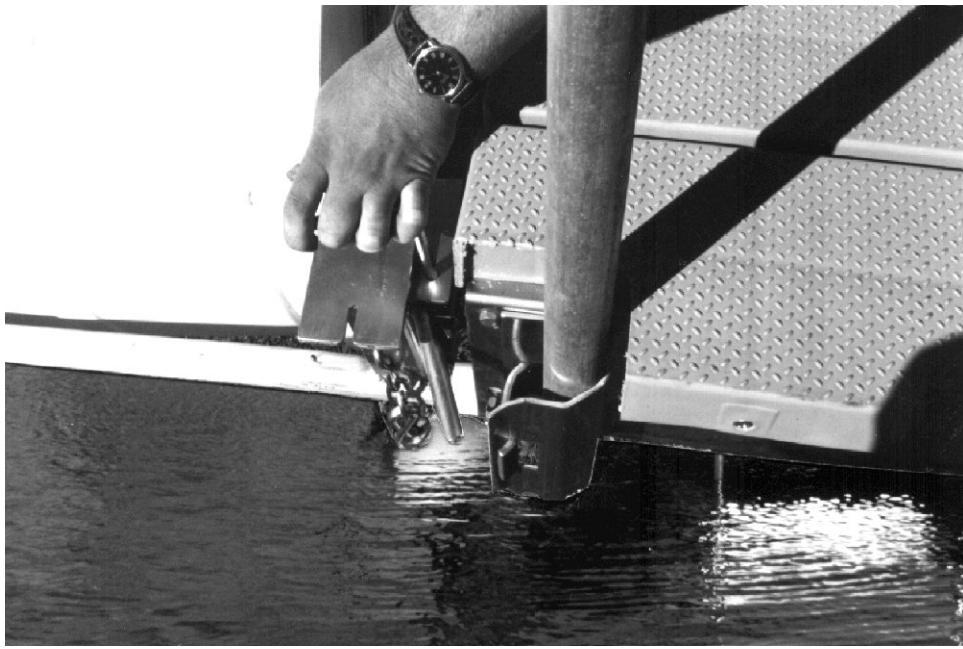

To remove Roll-N-Float, hold down on handle while rotating safety latch this will allow the float to rotate free. (Remove Handle)

To remove dock from lake reverse the steps

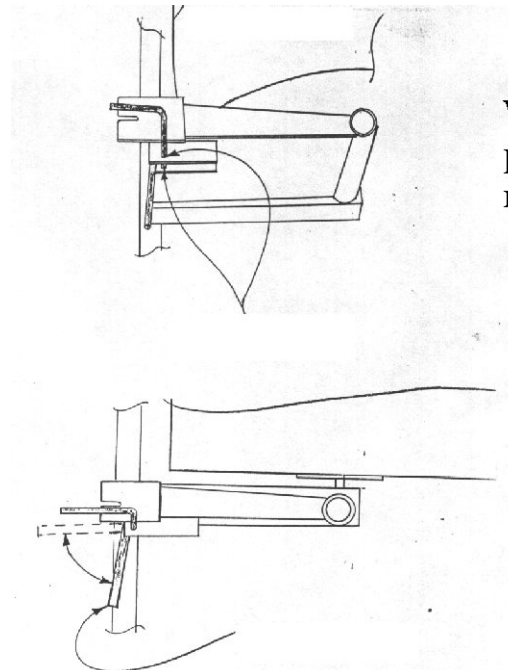

Where arrows are located oil periodically so safety latch moves freely

Latch must easily spring back into this position

MAKE SURE THERE IS NO WATER LEFT INSIDE THE BARRELS

WINTER MAINTANCE

Copyright R&D Manufacturing 1992