



## Telescoping Fiberglass Flagpole Instructions

This telescoping fiberglass flagpole is adjustable to a range of 6'-15' heights. Appropriate for temporary or permanent use.

Use the twist grips to unlock and lock each section in place at the desired height. When extending the sections, you will feel a stop before reaching the end of the section. Do not pull the sections out beyond this point. Be careful not to over-tighten grips to prevent damage.

- Twist the grip - counterclockwise to unlock the connections.
- Twist the grip - clockwise to lock the pole section in place.

*Be cautious and always raise your pole in areas free from obstructions and overhead hazards.*

*Fiberglass is generally nonconductive, although moisture or other conditions may cause the pole to conduct electricity when contacting electrical lines, etc.*

### FLAGPOLE PACKAGE INCLUDES:

- ✓ Flagpole
- ✓ Bracket
- ✓ Flag
- ✓ Never Furl

