



If you cannot go farther down on the screw drive legs. You can do two things

1. Loosen the U- Bolts and Slide the dock down on the Leg

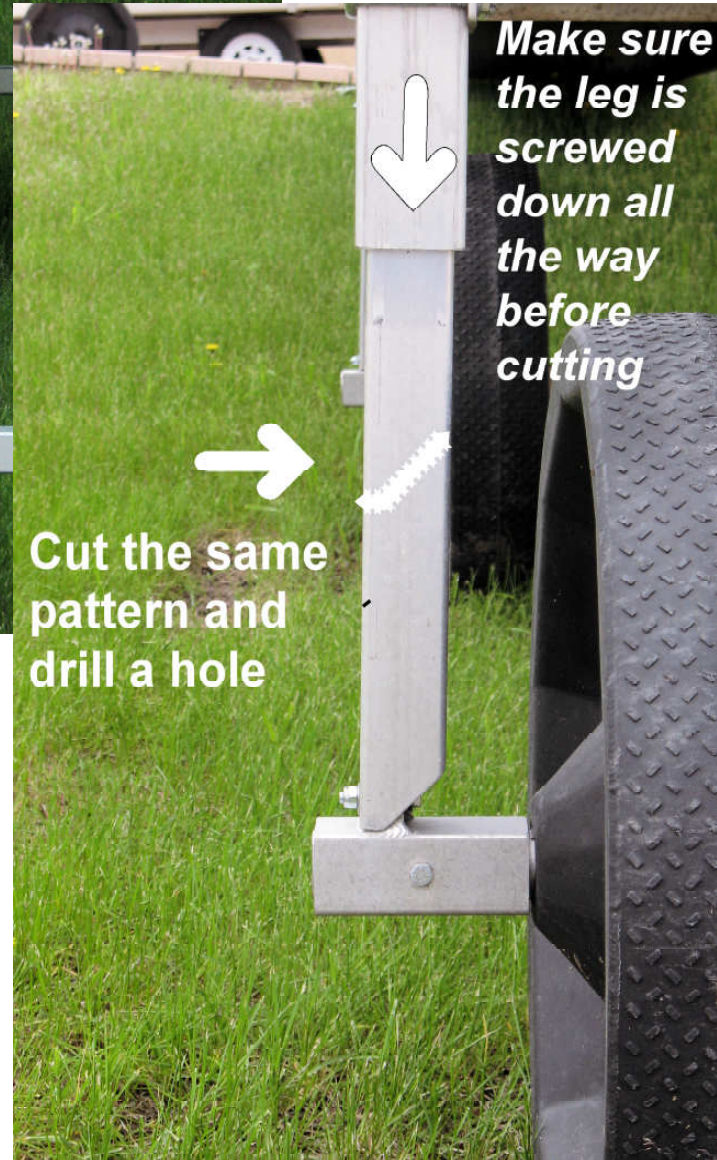

2. If that isn't low enough and you have excess material on the inner leg you can cut the excess material and drill another hole

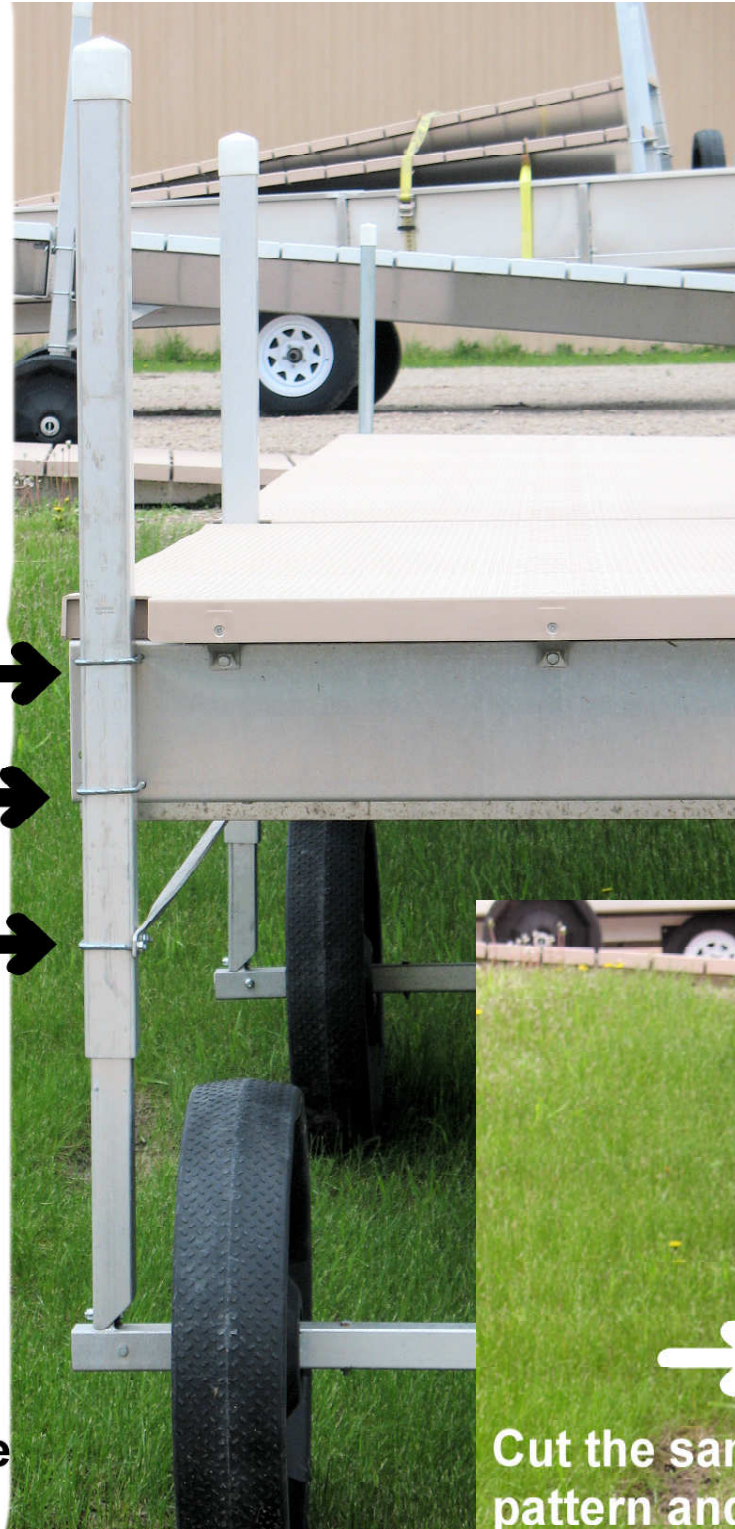

Make sure the leg is screwed down all the way before cutting

Cut the same pattern and drill a hole