

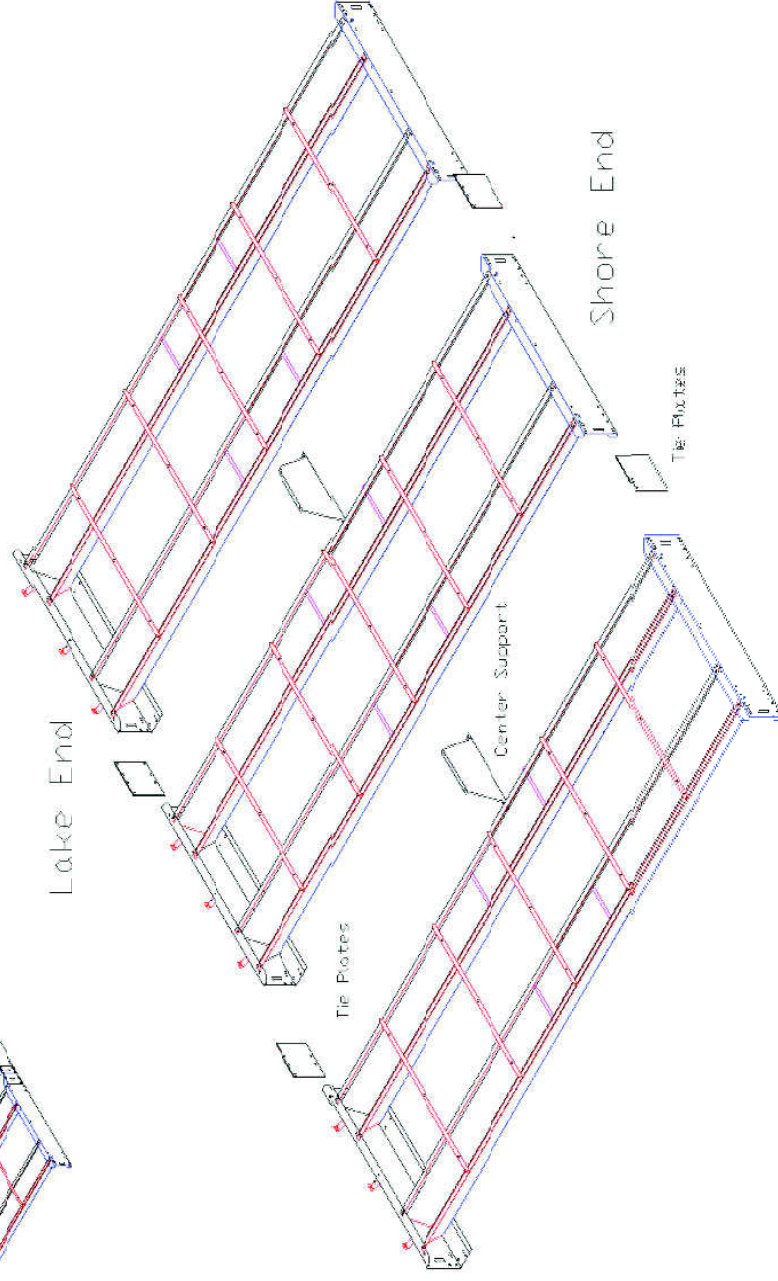




Triple Wide Sundeck Instructions

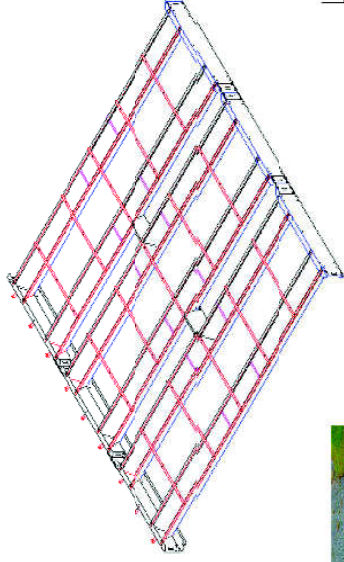


View of 2 frames already put together

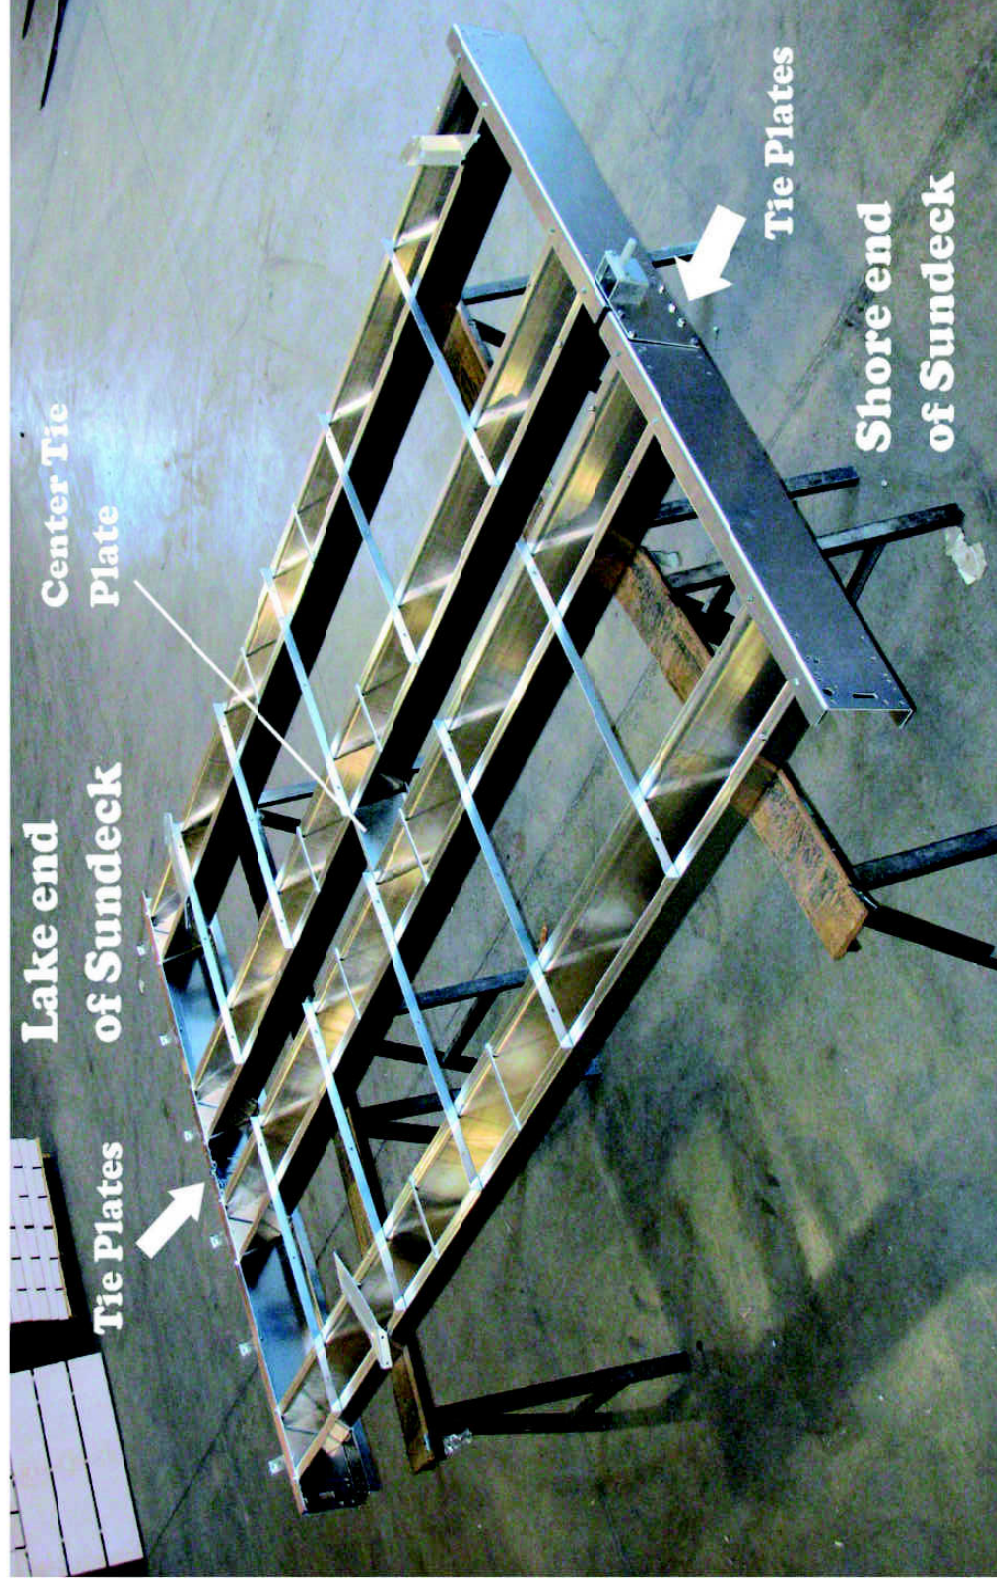

Leg Spacer & Connecting Pin Already Assembled (reference page only)

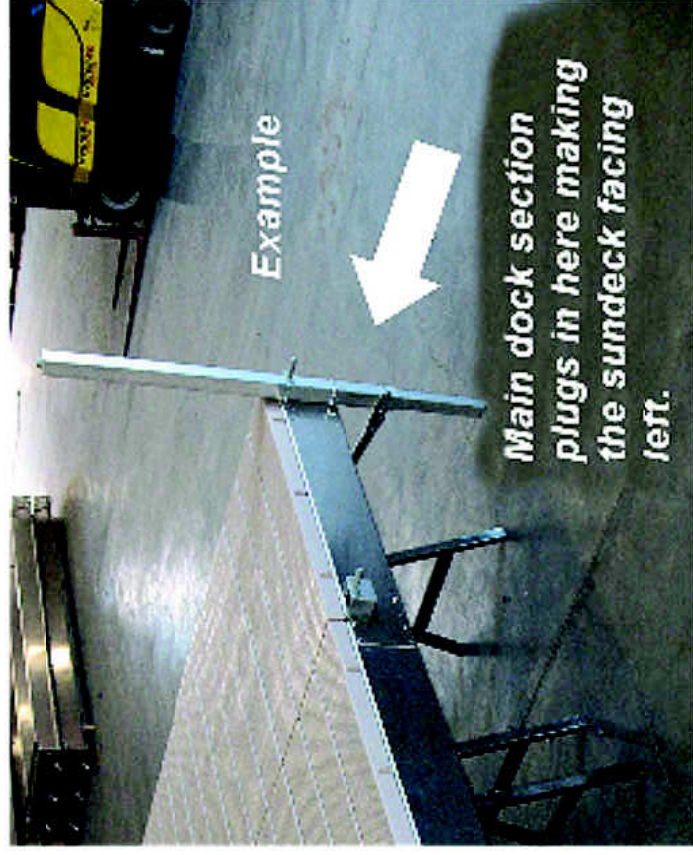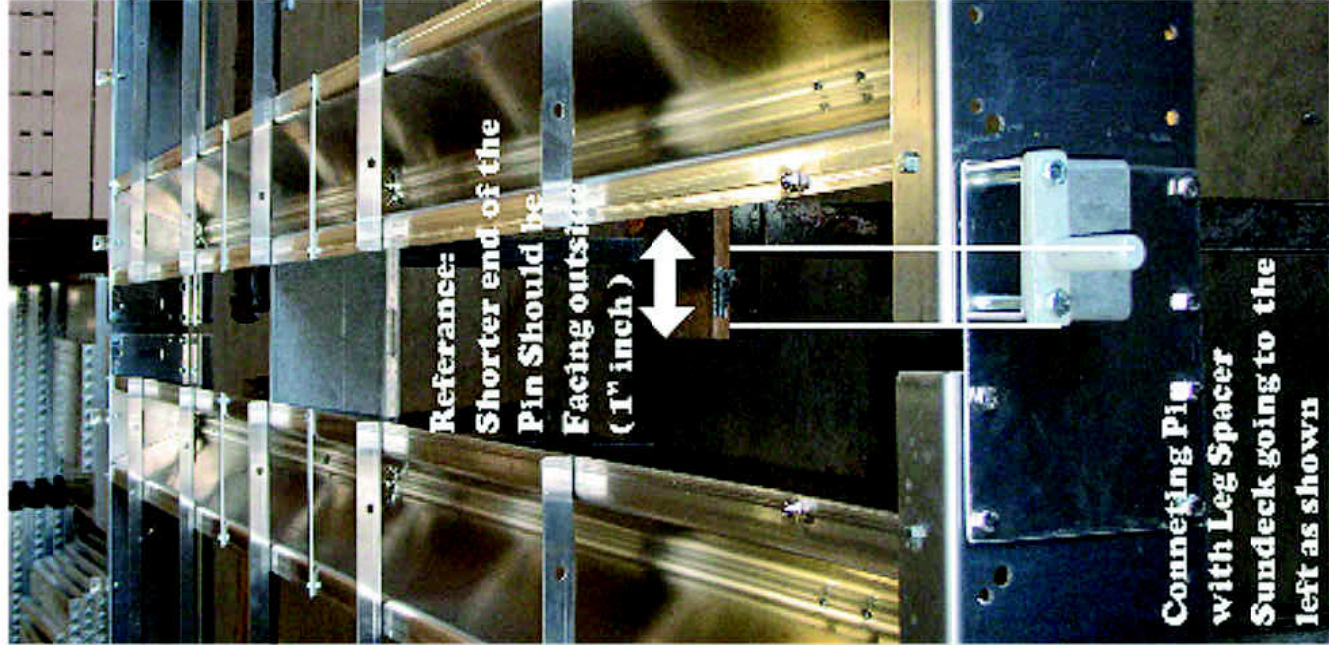


Leg and decking installed later....

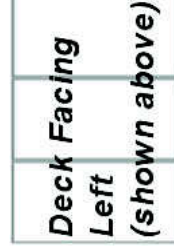

Bolt on the 3rd Section

Bolt on Tie Plates

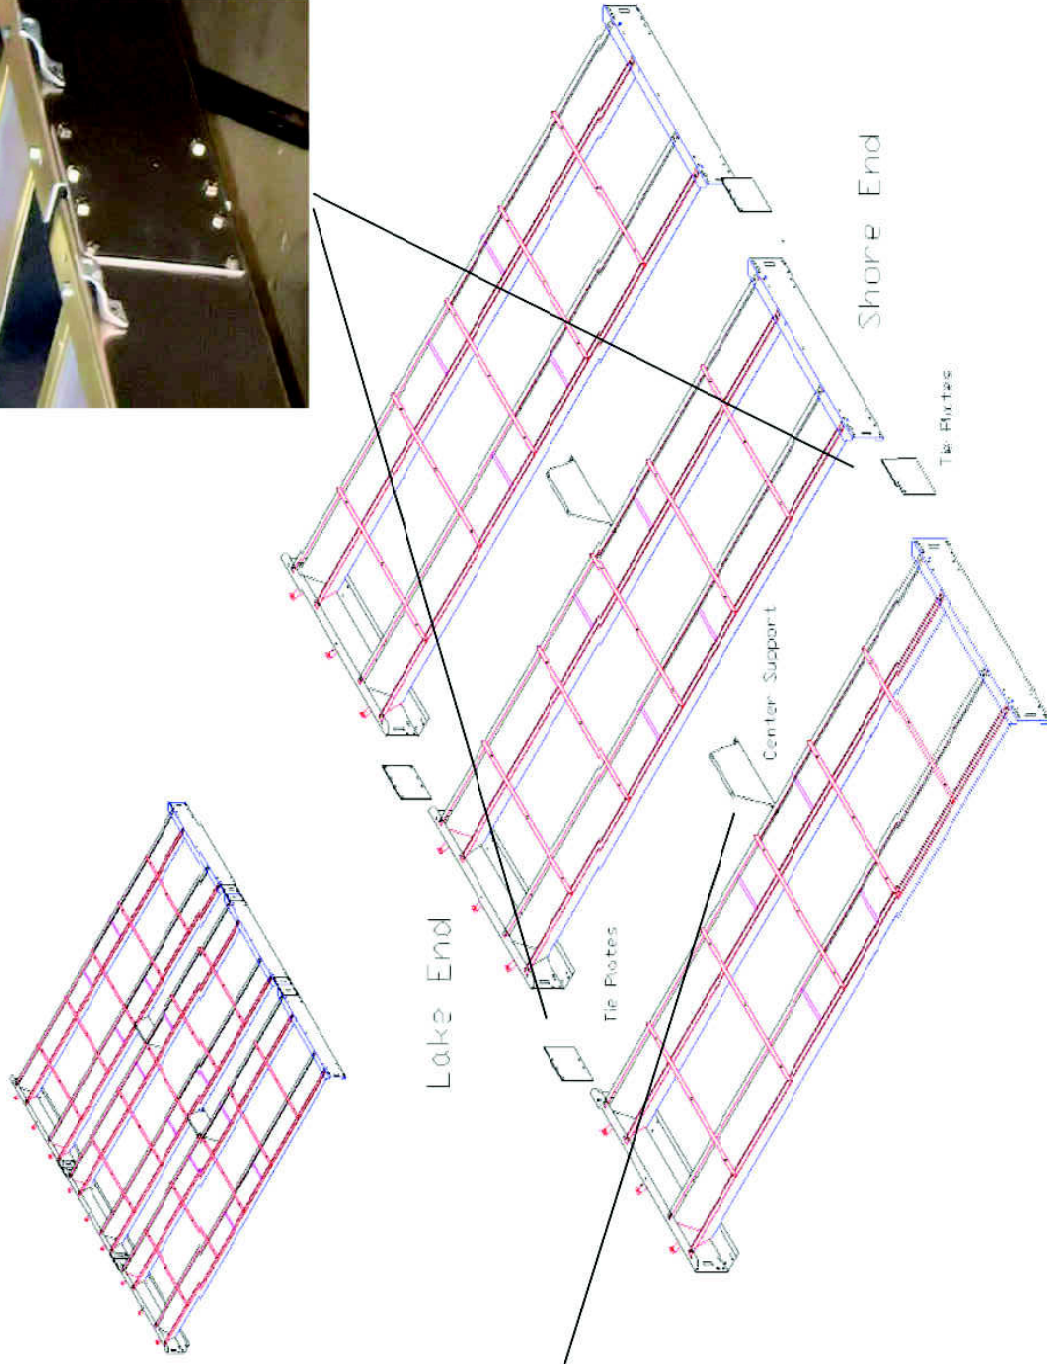

Bolt on Center Support





Fasten with two 1/4" x 3/4"
hex head bolts (remove old bolts
& replace with longer 3/4" bolts)


Center Tie Plates
Tighten as shown

Bolt on Leg Gussets and Loosley Fasten U-Bolts

Tighten 5/16 x 1" Hex Head Bolt, Washer & Nut so the Washer Conforms into a Radius as Shown

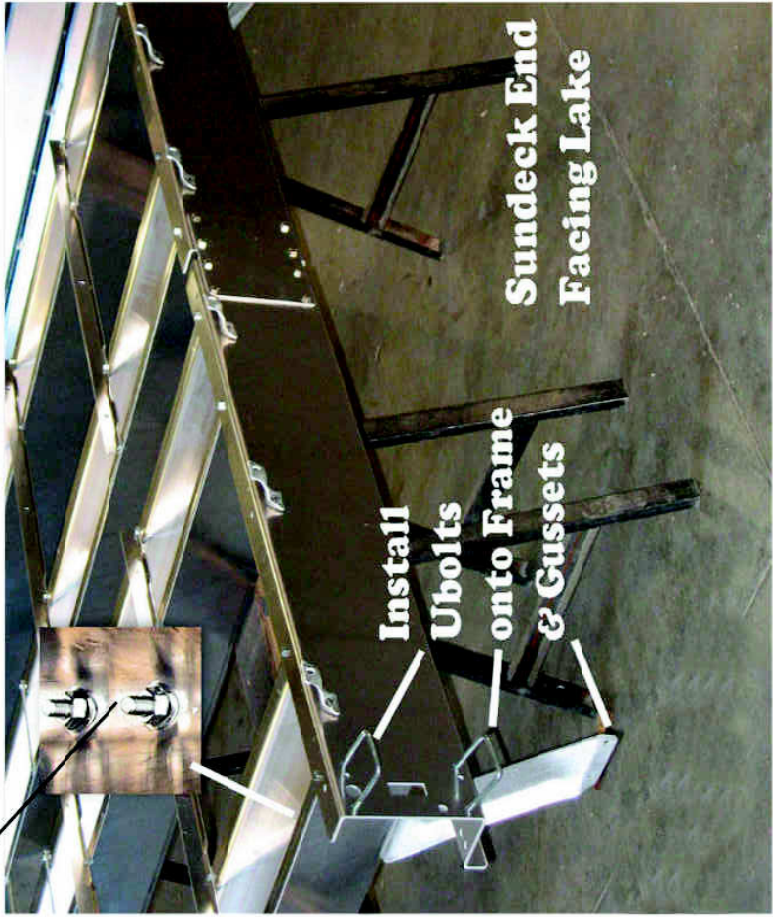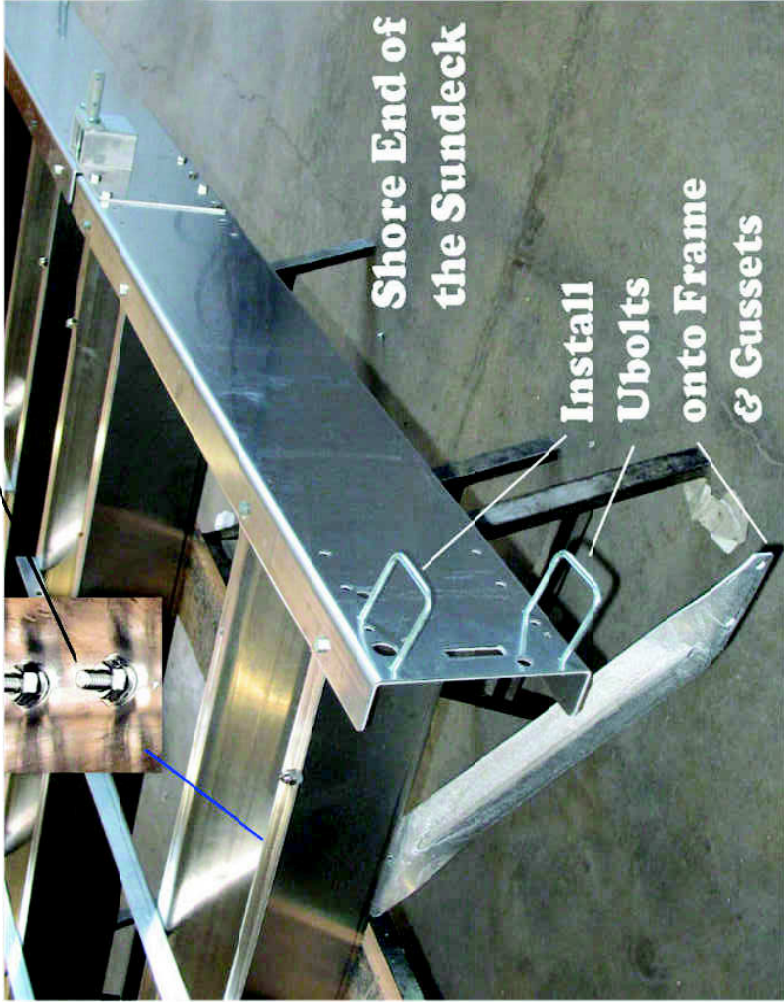


Note:
Location of the Gussets will be marked

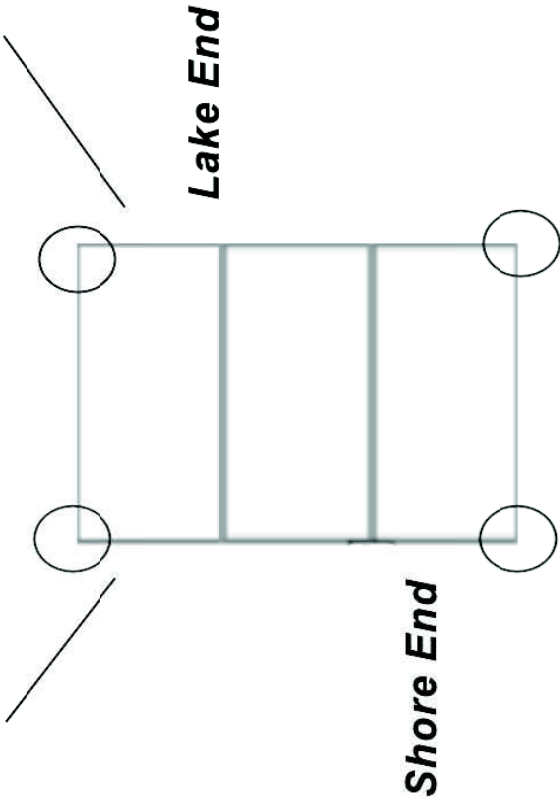

Slide Four Screw Drive Legs through the U-Bolts & Attach the Axle



**Make Sure
Angle is
Facing the
Center of
the dock**

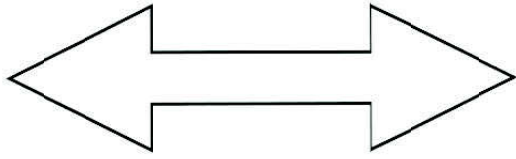


**Measure about
28" - 32"
from the top
of the frame
to the top
of the leg.**

**Note: longer
inner legs
go to the
lake end
of the dock**




**Slide axle connection
into the screw drive legs
as shown above.**

**Slide the axle connection
into the leg as shown.
Tighten the spring bolt
& lock nut until the threats
of the bolt just goes beyond
the lock not leaving
the spring flexible.**

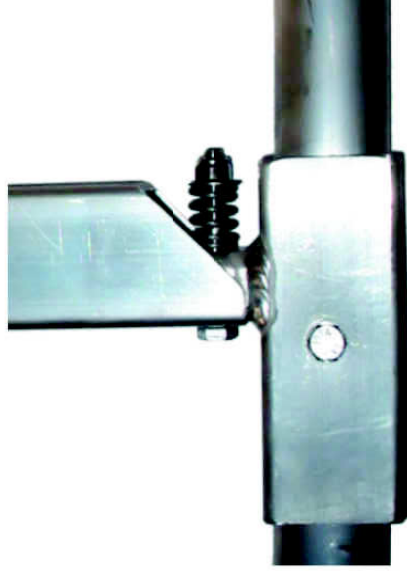

Insert all the Regular Panels as Shown

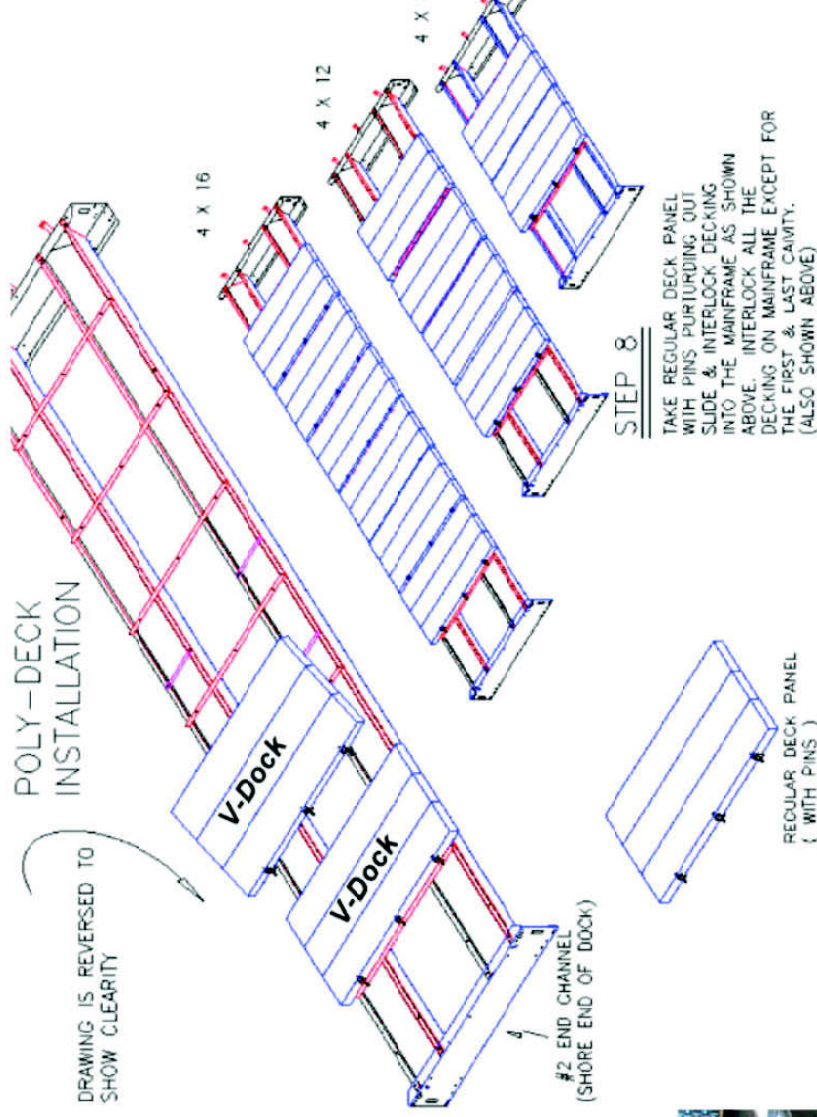

Insert all regular panels leave the first & last cavities open




Pins inserted in crossmembers as shown




Sundeck End Facing Shore

Insert the Starter Panels & Notched Panels as Shown

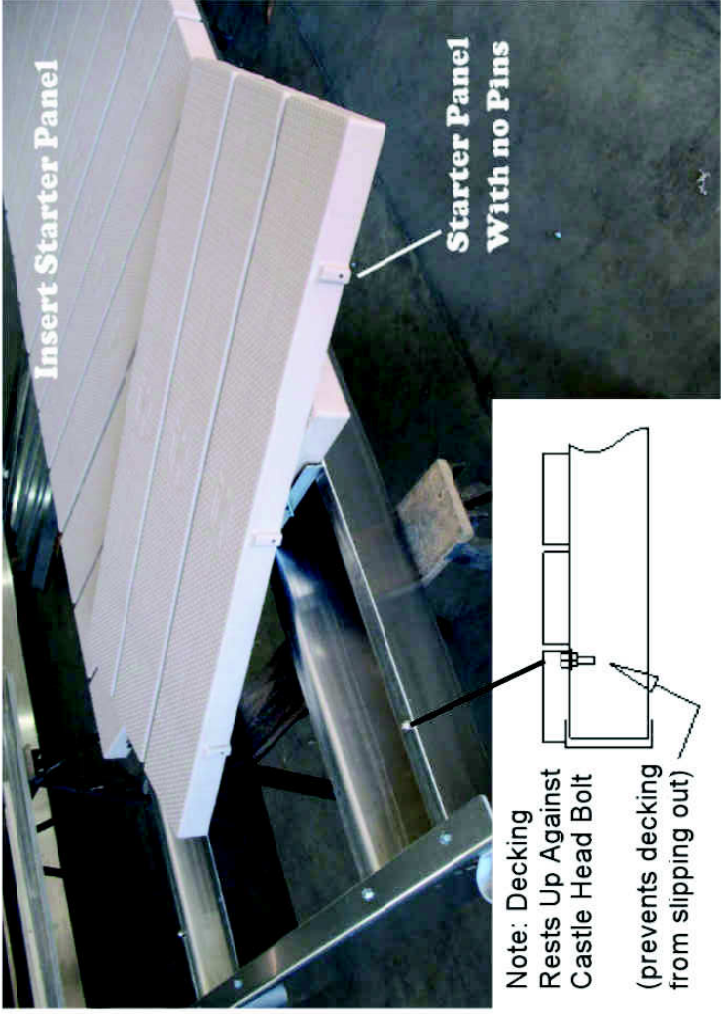

Screw all 12 Screws to Hold In Notched Panels

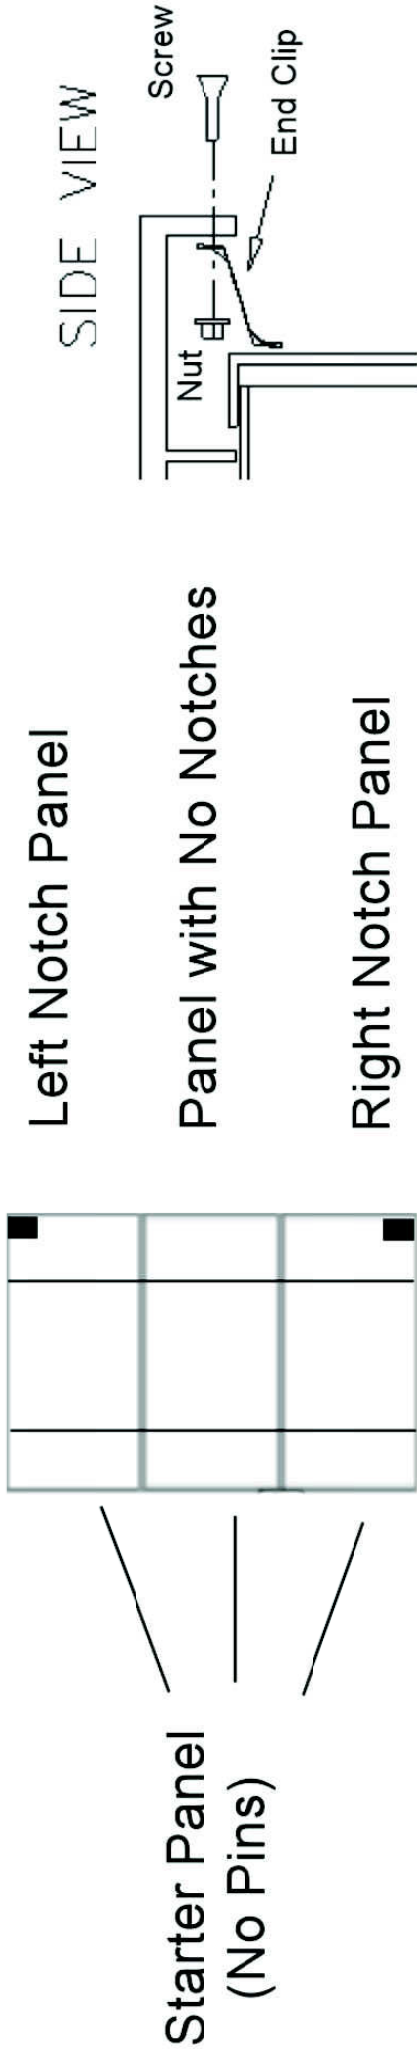


Left Notch Panel

Panel with No Notches

Right Notch Panel

Starter Panel (No Pins)

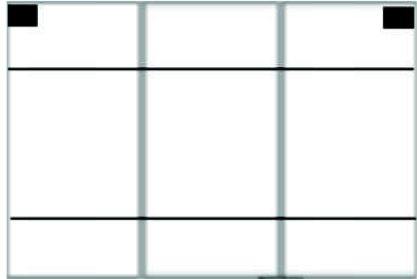

Shore End

Lake End

Turn clips and tighten to the framework as shown



