



Safety Cleat Installation Instructions

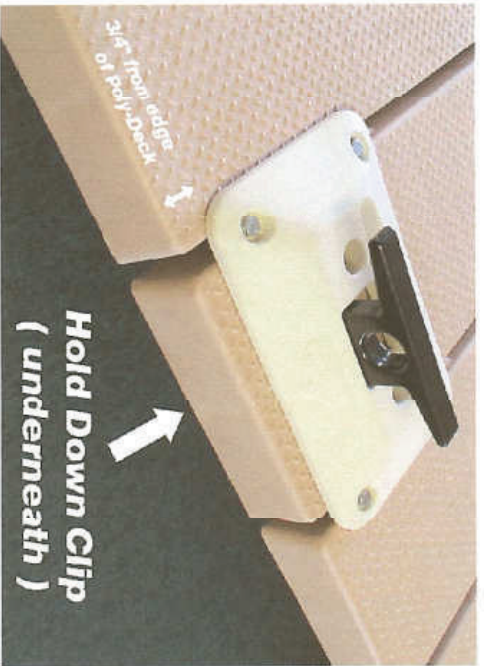

Step 1. You can place your safety cleat wherever there is a hold down clip. That's every 2' along the dock. Make sure the label on the Safety Cleat shows "Direction Of Pull" is facing toward edge of dock.

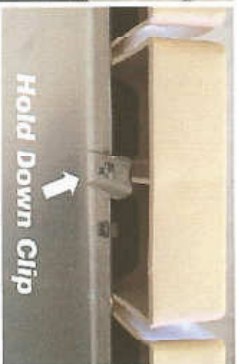

Step 2. Loosen the hold down clip with a 7/16 socket wrench then turn the clip 90 degrees. Now you can lift up on the poly deck to making it able to bow.



This will not harm the dock.



Step 3. Place cleat off the edge of the dock; next place (2) 1/4" x 3" hex head bolt & washers through cleat as shown. Install cleat clip under decking and loosley hand tighten with a 1/4" flange nut.

Step 4. Slide cleat toward center of dock until cleat is 3/4" away from the edge of the Poly Deck.

Repeat fastening the remaining 2 cleat clips shown in Step 3



Step 5. Tighten the 4 bolts on the safety cleat firmly with a 7/16" socket wrench. Turn the hold down clip back 90 degrees and tighten.

