

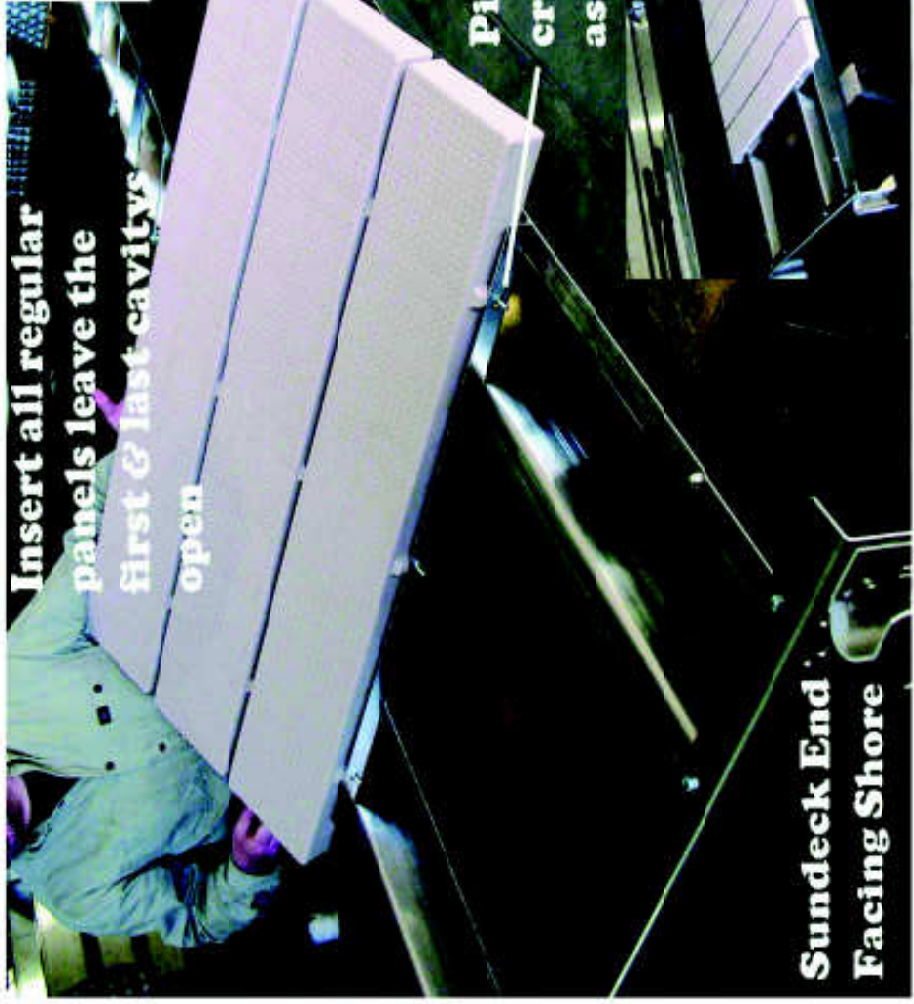



Insert all the Regular Panels as Shown

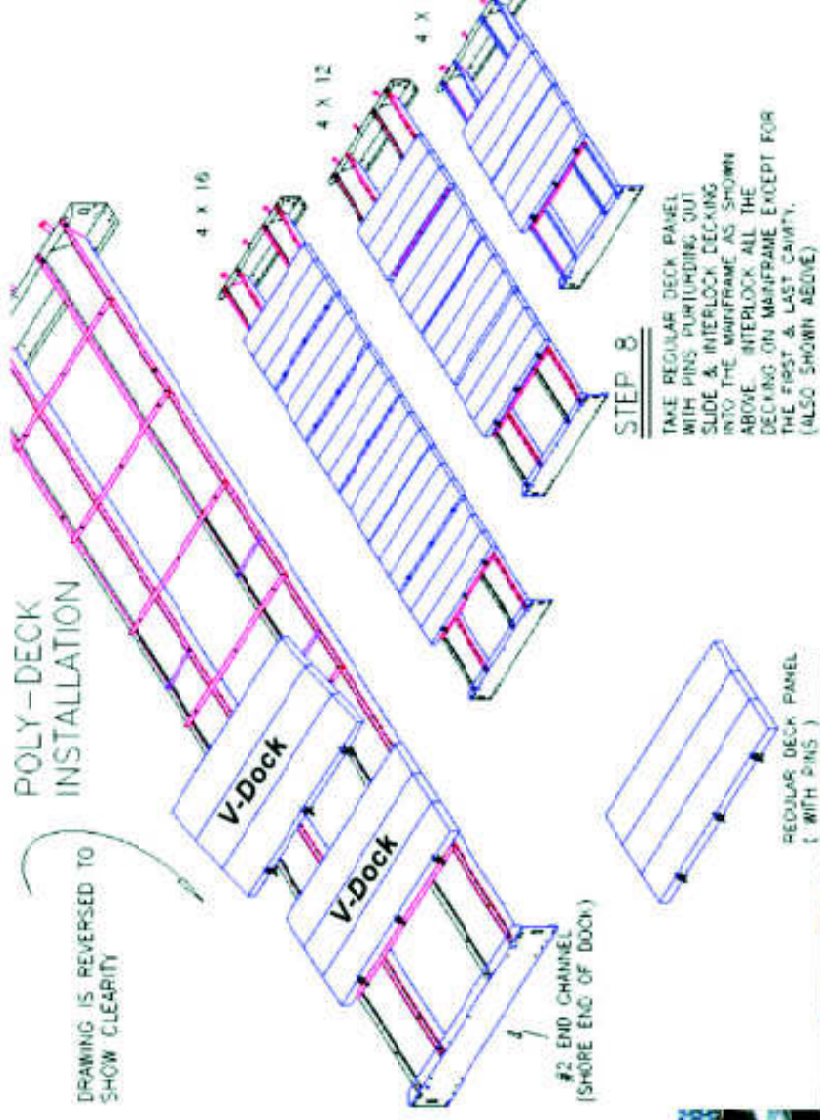


Insert the Starter Panels & Notched Panels as Shown

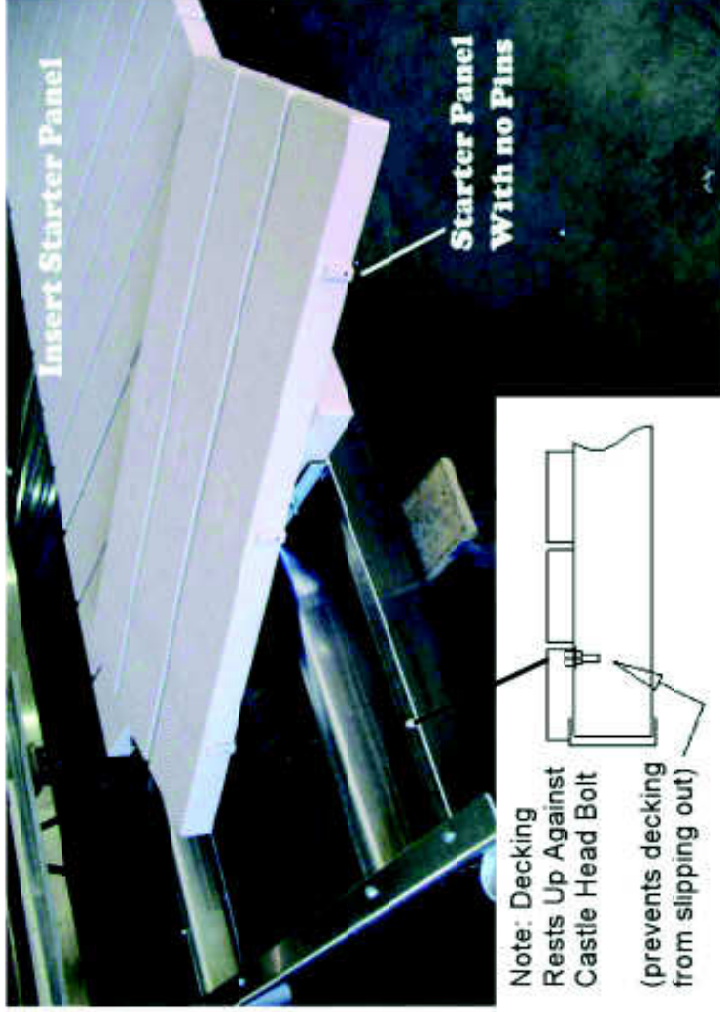

**Starter Panel
With no Pins**

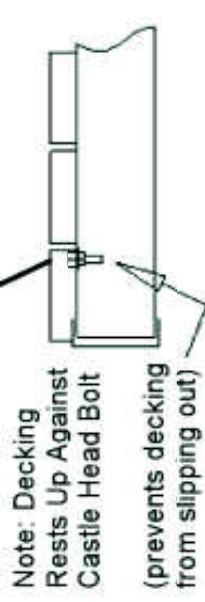

Screw all 12 Screws to Hold In Notched Panels

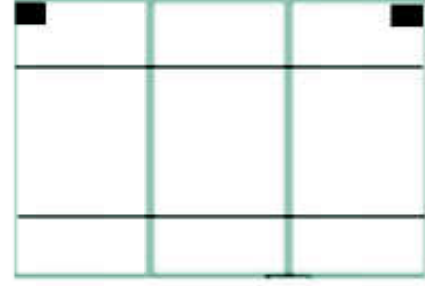

Shore End


Lake End

Left Notch Panel

Panel with No Notches

Right Notch Panel

SIDE VIEW

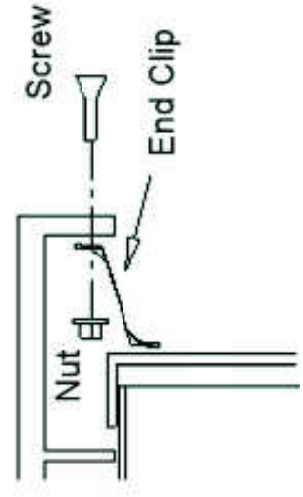

Turn clips and tighten to the framework as shown



