


# Vertical Post Bumper – Square Post

## Single Bumper

Place 2 1/2" U-Bolts around leg. Fasten with Flange Nut.  
NOTE: Recommended height above decking is 16 inches.

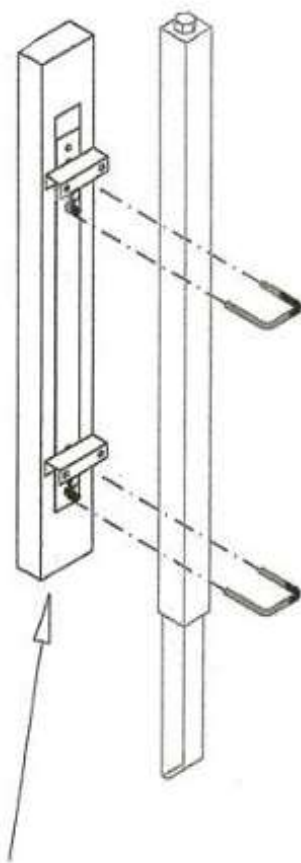

**Drainage Hole  
Facing Bottom**

## Corner Bumper

Add second bumper as shown below.  
NOTE: Bracket for the U-Bolt is move up one hole.

