

U-Bolts &
Caps

Quick
Hitch



Measure 30"
From Top of the
Leg to the Decking
& Fasten 4
U-Bolts as Shown.
Note Have the Leg
Angles Facing
Each Other

V-Dock
Screw Drive Shore
Wheels Instructions

651-464-3902





Slide the axle connection into the leg as shown. Tighten the spring bolt and lock nut until the theads of the bolt just goes beyond the lock nut leaving the spring flexible.



Quick Hitch Instructions

To install: Insert the 1/2" bolt through the bottom hole closest end channel to shore (the end channel that the shore ramp is connected to)

Fasten the 1/2" lock nut using (2) 3/4" end wrenches. Then slightly loosen up the nut enough to allow the quick hitch swivel freely.

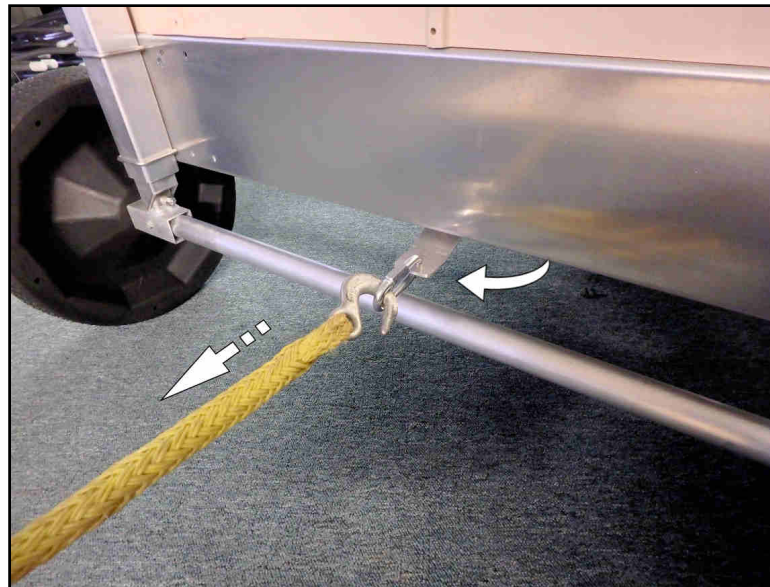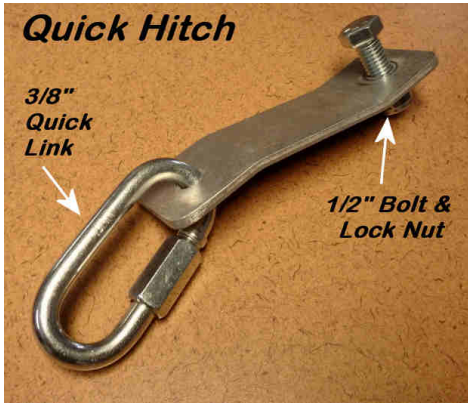

The quick hitch can swivel out so a tow rope can be attached as shown.

Please exercise caution pulling the dock out of the water.