
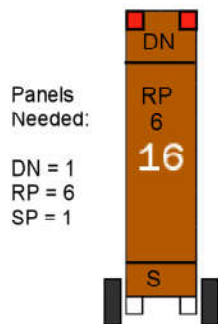
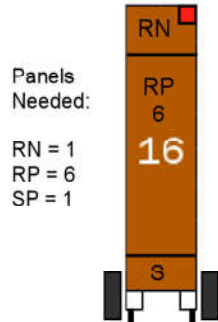



Represents
Notched
Area

Example
54' Long
12x16 Sundeck
Facing Left
(marked in more detail)




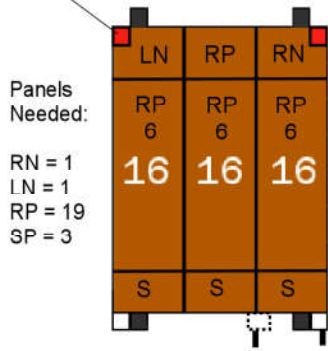


6' Ramp

DN Ramp Panel 1
RP Ramp Panel 1
SP Ramp Panel 1





Example
48' Long
12x10 Sundeck
Center Mount

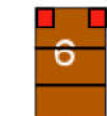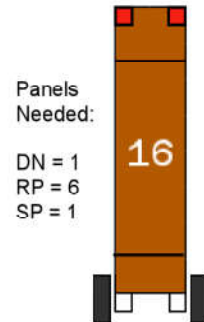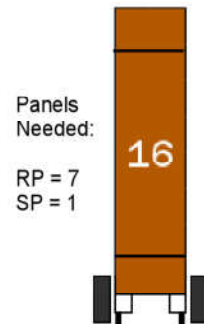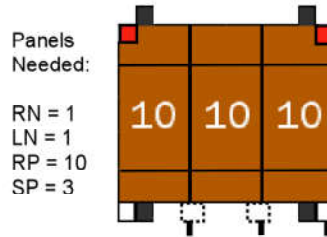

6' Ramp

DN Ramp Panel 1
RP Ramp Panel 1
SP Ramp Panel 1

Example
36' Long
8x10 Sundeck
Facing Right

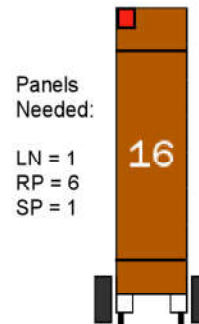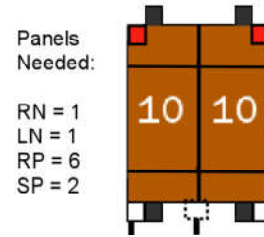

10' Ramp

DN Ramp Panel 1
RP Ramp Panel 3
SP Ramp Panel 1

Scan for Video Overview







Step 6.

Shore End



V-Dock Decking Location
(use any combination)

Example
40' Long
Straight
Roll In

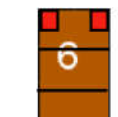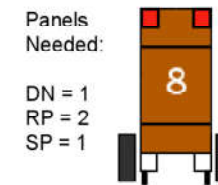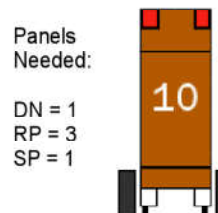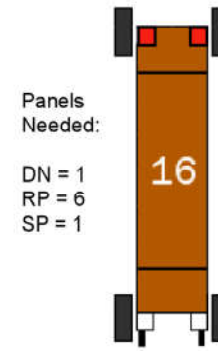

6' Ramp

DN Ramp Panel 1
RP Ramp Panel 1
SP Ramp Panel 1

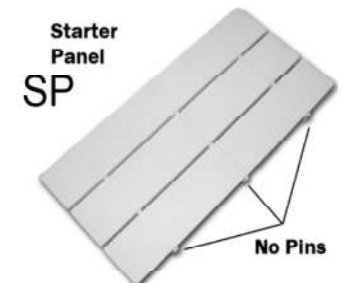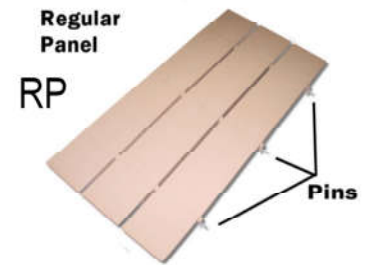

White Shown Here



**Insert all regular
panels leave the
first & last cavities
open**


**Pins inserted in
crossmembers
as shown**

**Sundeck End
Facing Shore**




Insert Notched Panel

Notches are used to go around posts or legs

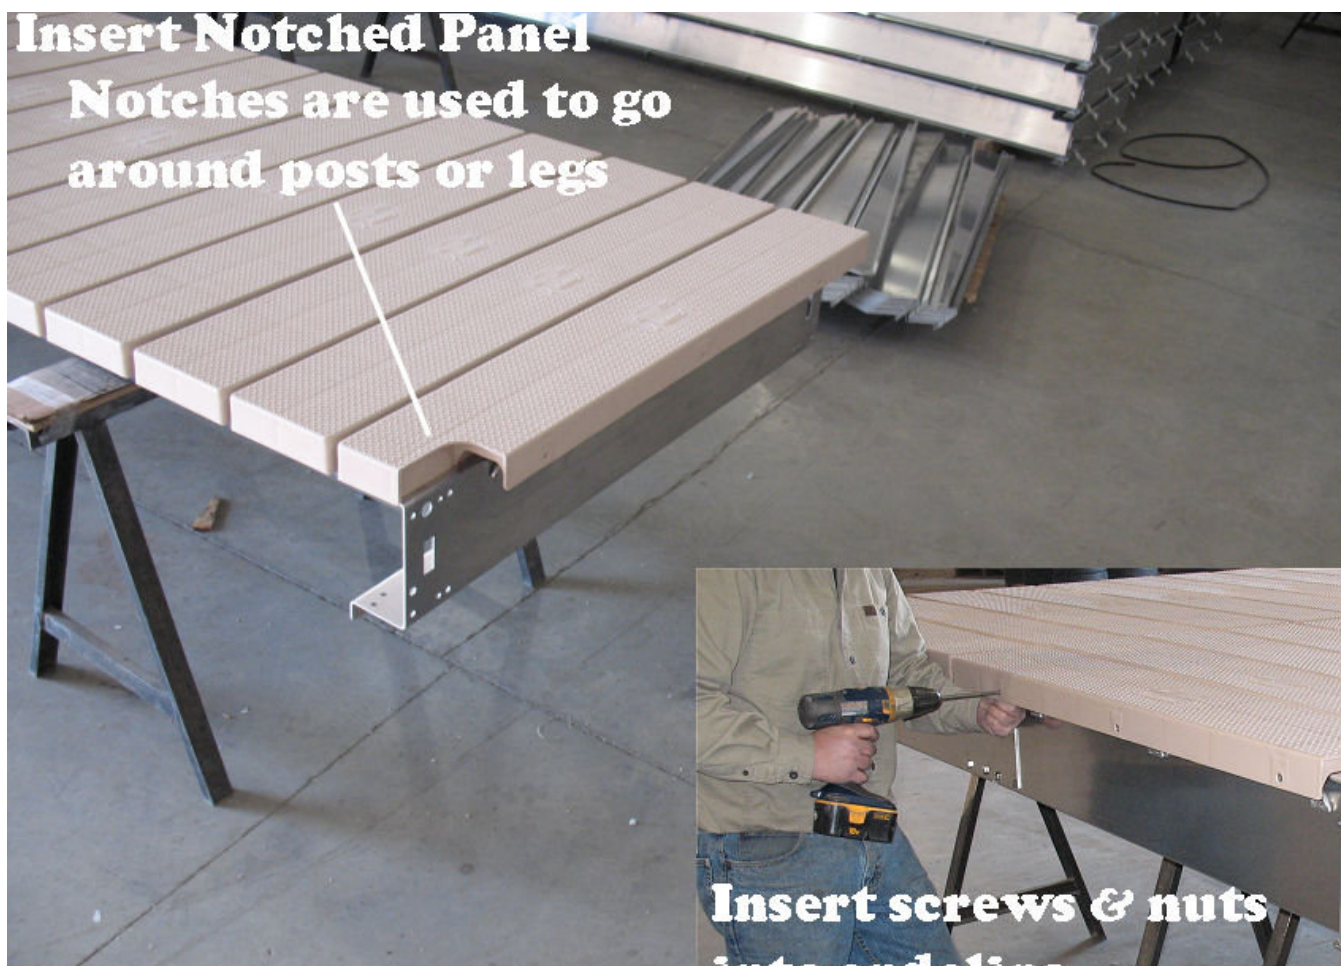

Insert screws & nuts into endline


Insert Starter Panel

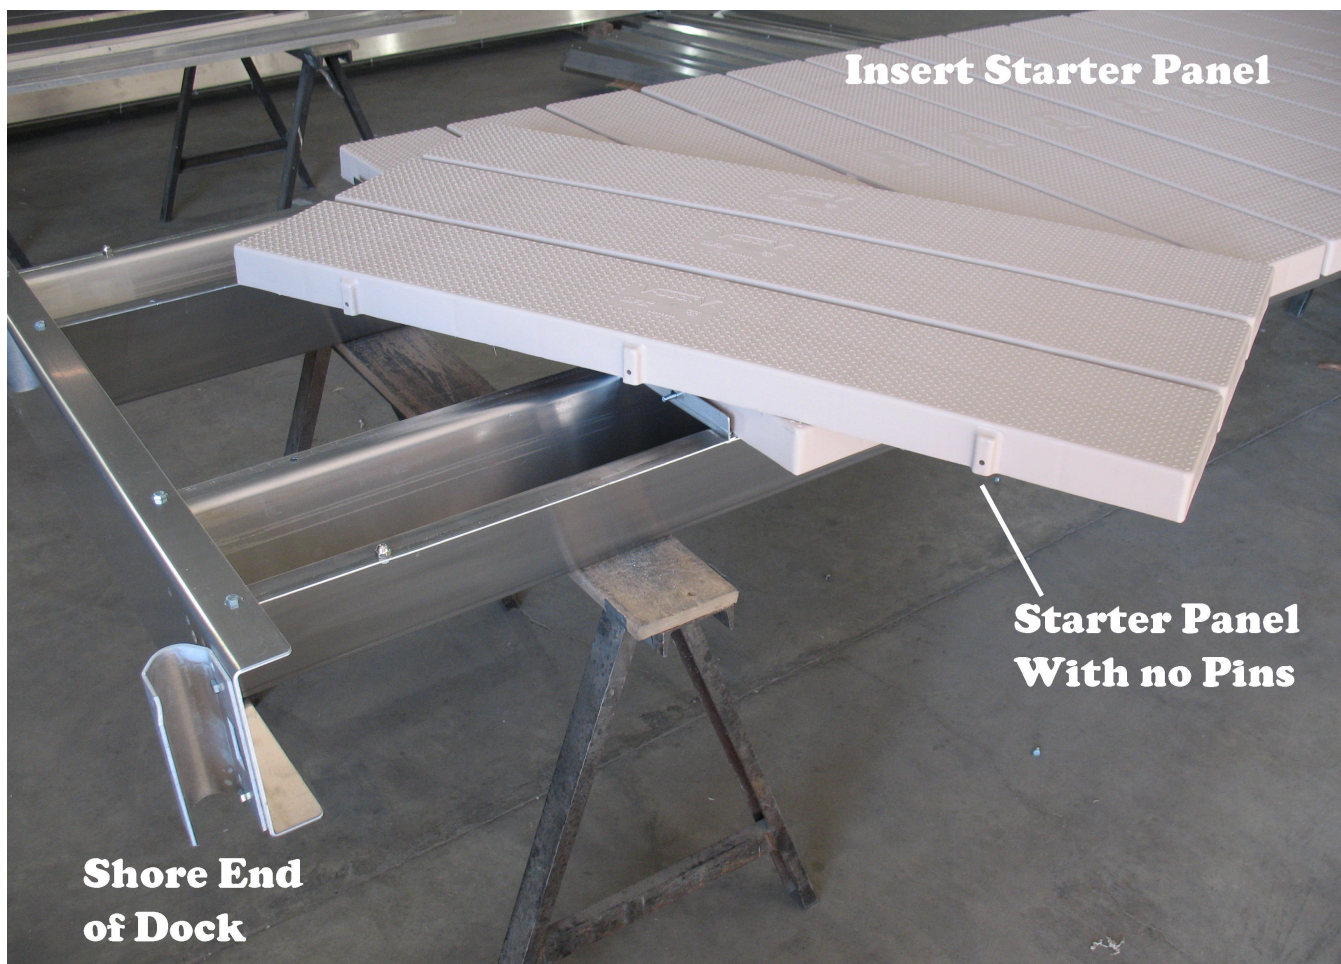


Starter Panel With no Pins

Shore End of Dock

Insert the Starter Panels & Notched Panels as Shown

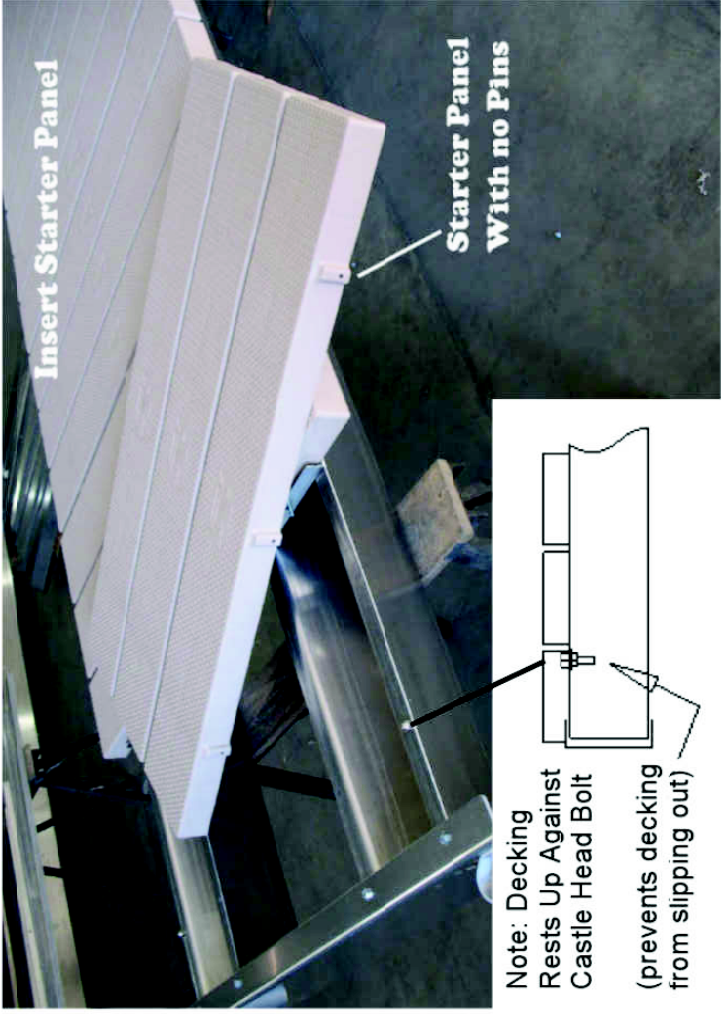

Screw all 12 Screws to Hold In Notched Panels

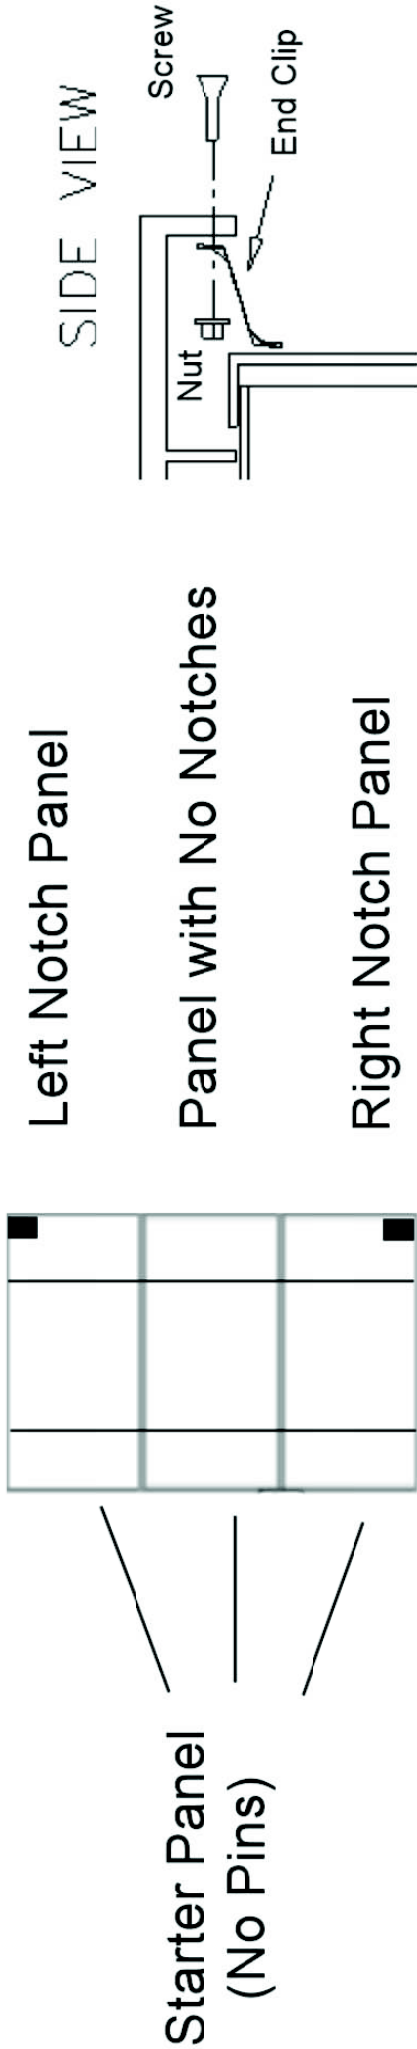

**Turn all clips and
tighten with a 7/16"
socket wrench or
use a drill attachment**

