

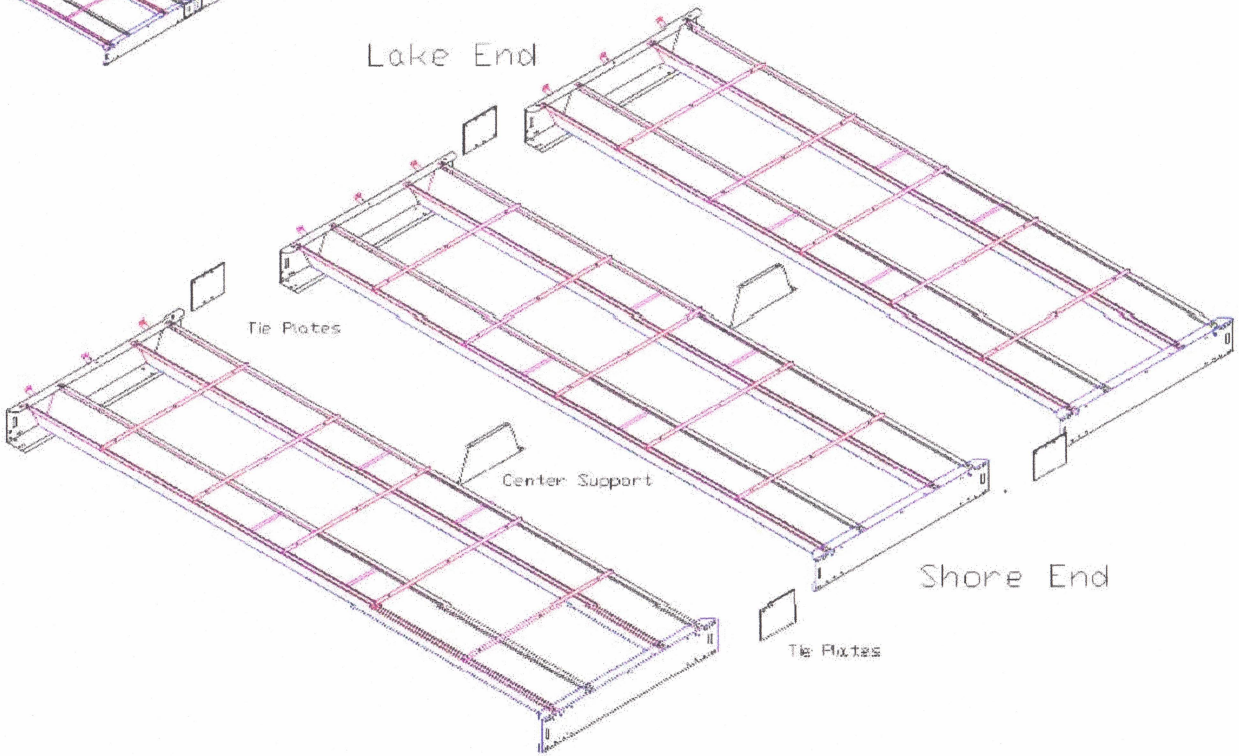


Scan the QR
Code For an
Video Overview


Triple Wide Sun Decks

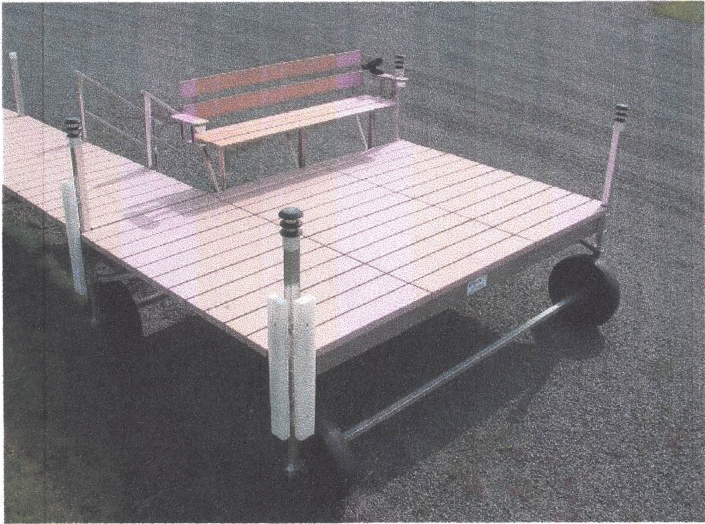





Triple Wide Sundeck Instructions

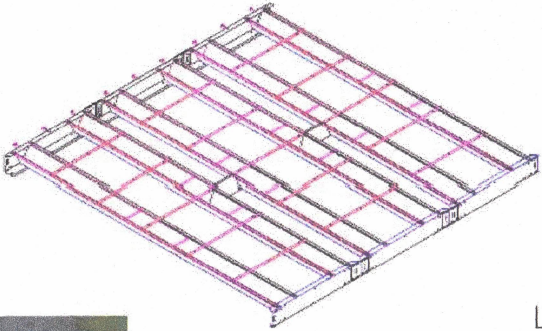

View of 2 frames already put together

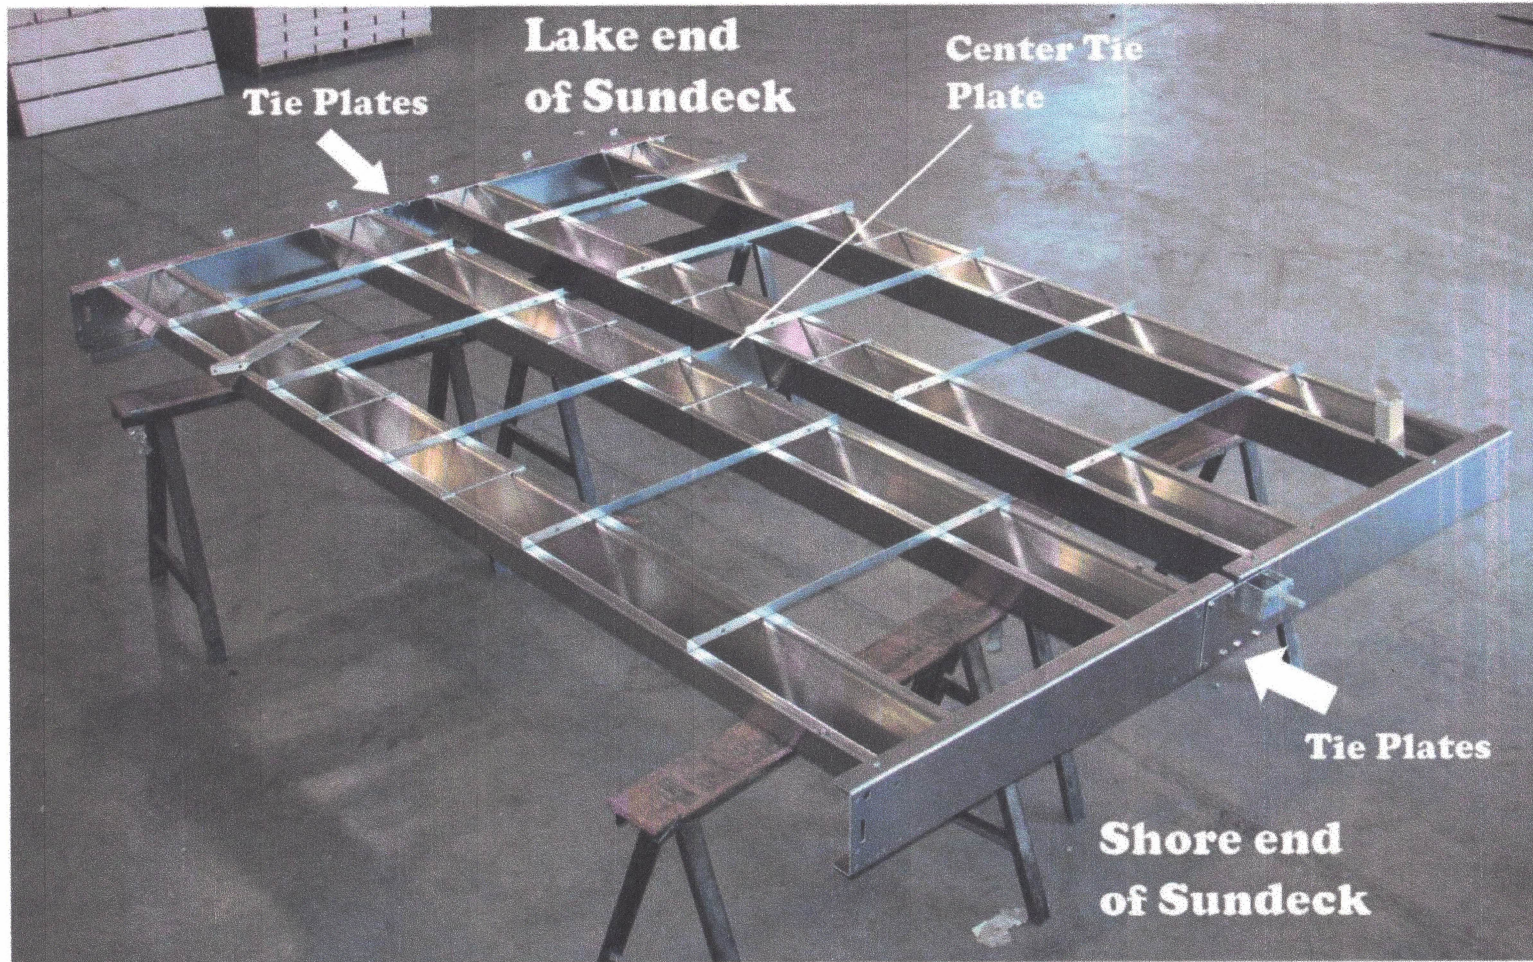

Leg Spacer & Connecting Pin Already Assembled (reference page only)

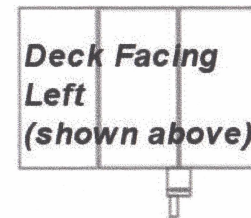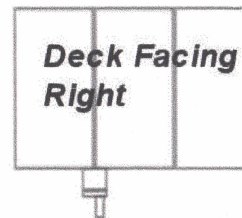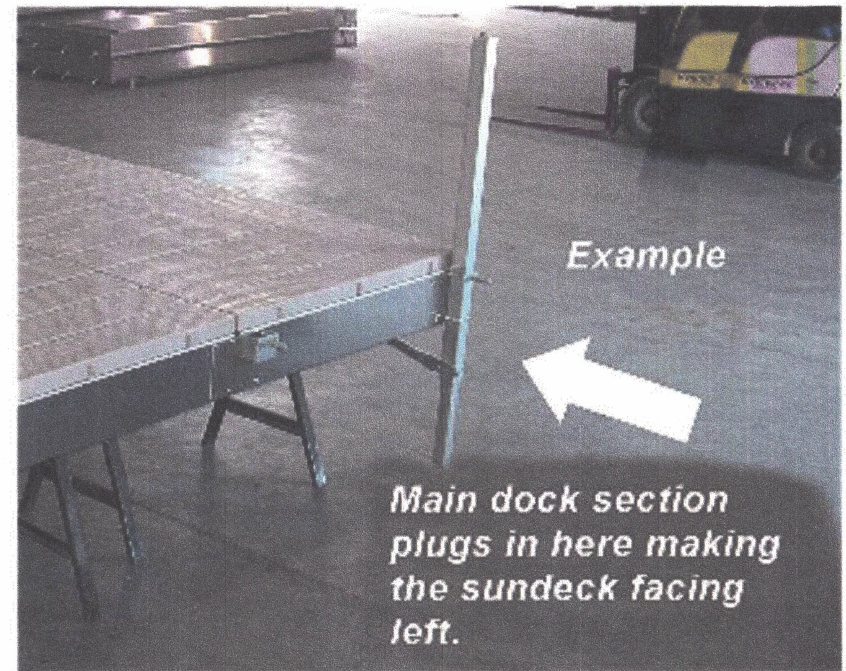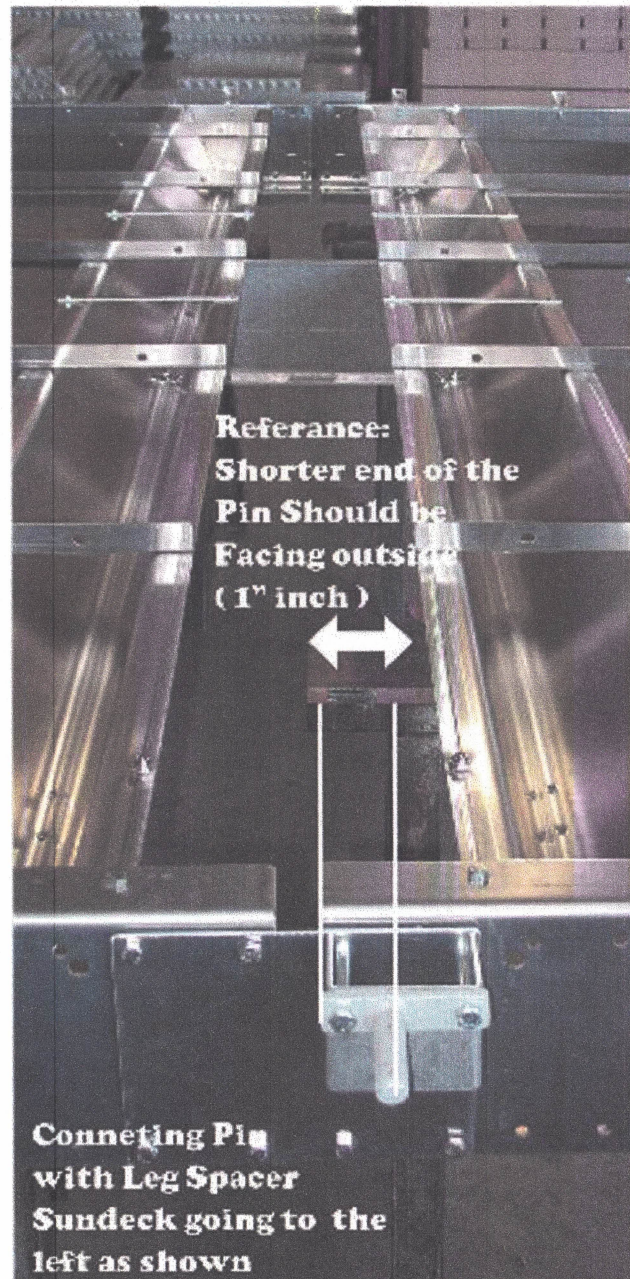

**Leg and decking
installed later....**





**Main
Dock**






**Main
Dock**

Bolt on the 3rd Section


Bolt on Center Support

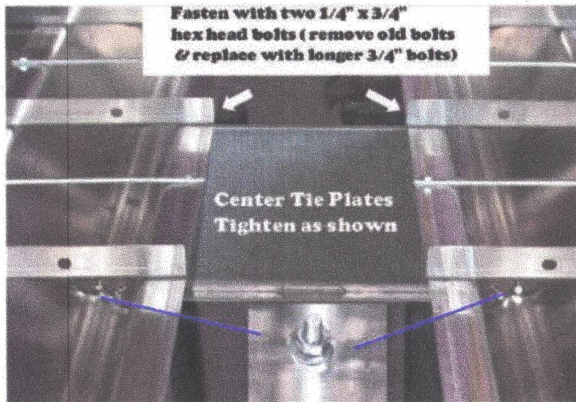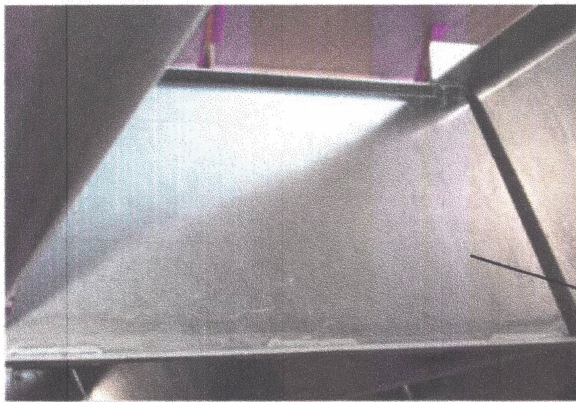

Bolt on Tie Plates

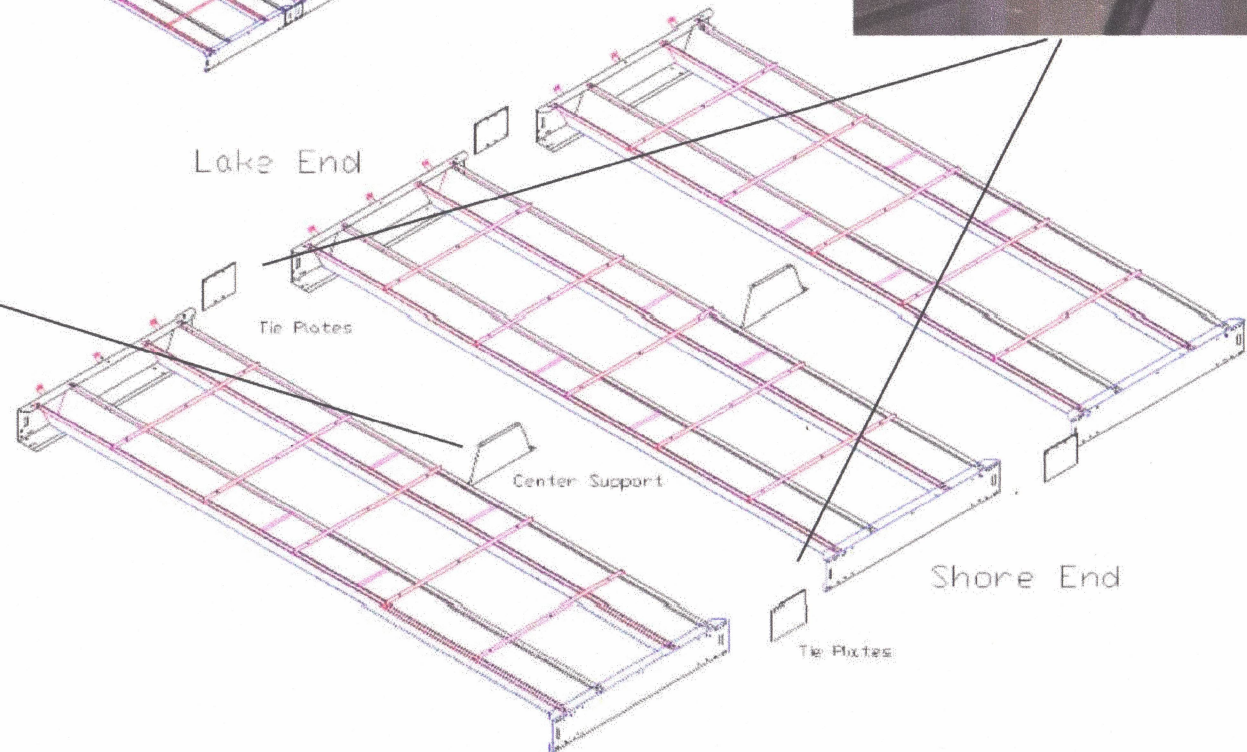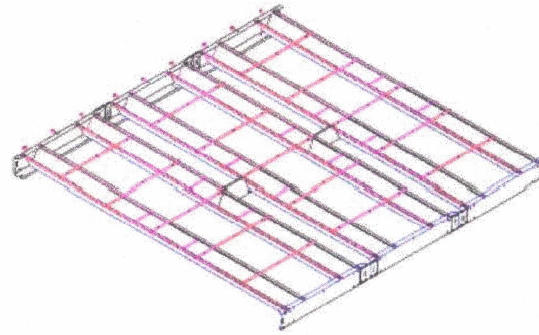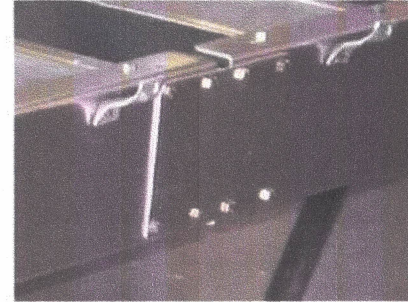


Slide Four Screw Drive Legs through the U-Bolts & Attach the Axle

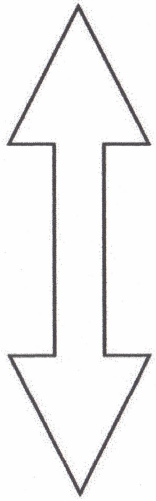


***Measure about
28" - 32"
from the top
of the frame
to the top
of the leg.***

***Note: longer
inner legs
go to the
lake end
of the dock***

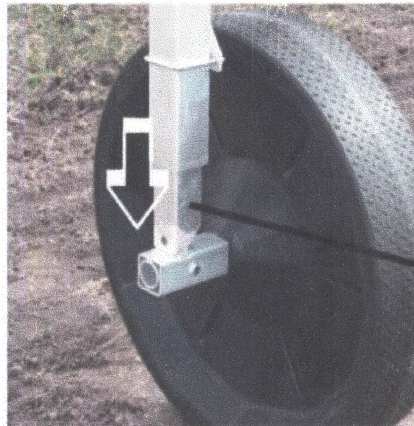

***Make Sure
Angle is
Facing the
Center of
the dock***


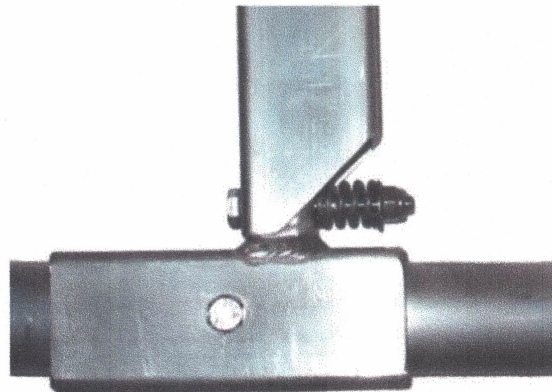


***Slide axle connection
into the screw drive legs
as shown above.***


***Slide the axle connection
into the leg as shown.
Tighten the spring bolt
& lock nut until the threats
of the bolt just goes beyond
the lock not leaving
the spring flexible.***

Bolt on Leg Gussets and Loosley Fasten U-Bolts


Tighten 5/16 x 1" Hex Head Bolt, Washer & Nut
so the Washer Conforms into a Raduis as Shown

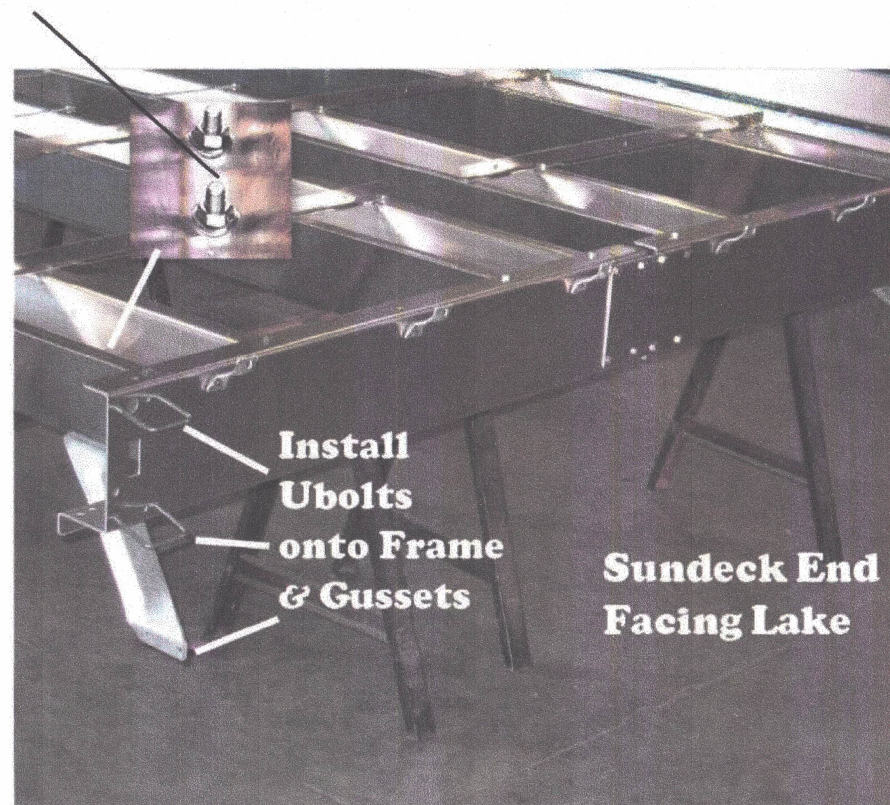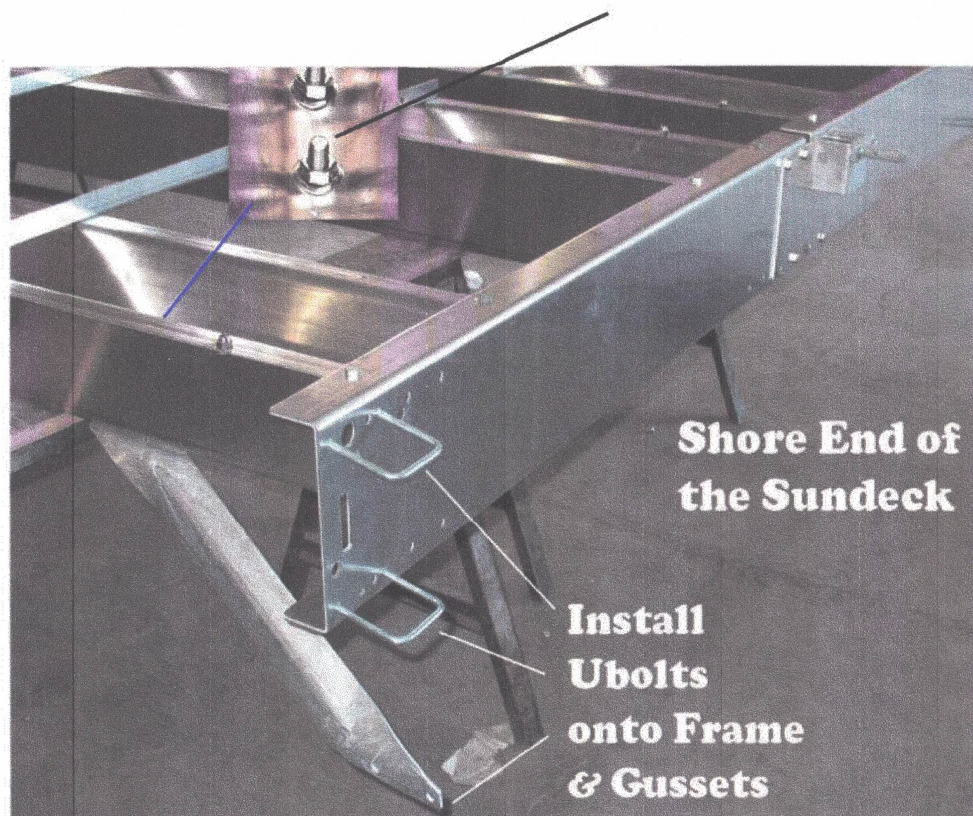

Note:
Location of the Gussets
will be marked

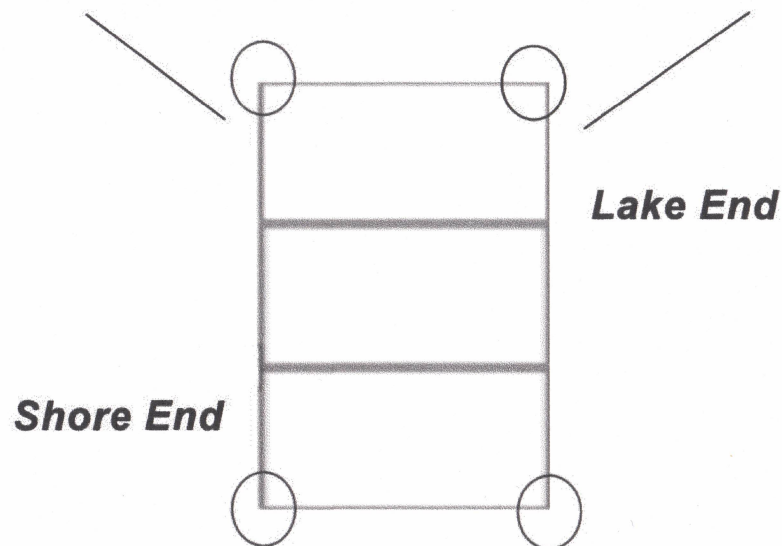


Insert all the Regular Panels as Shown

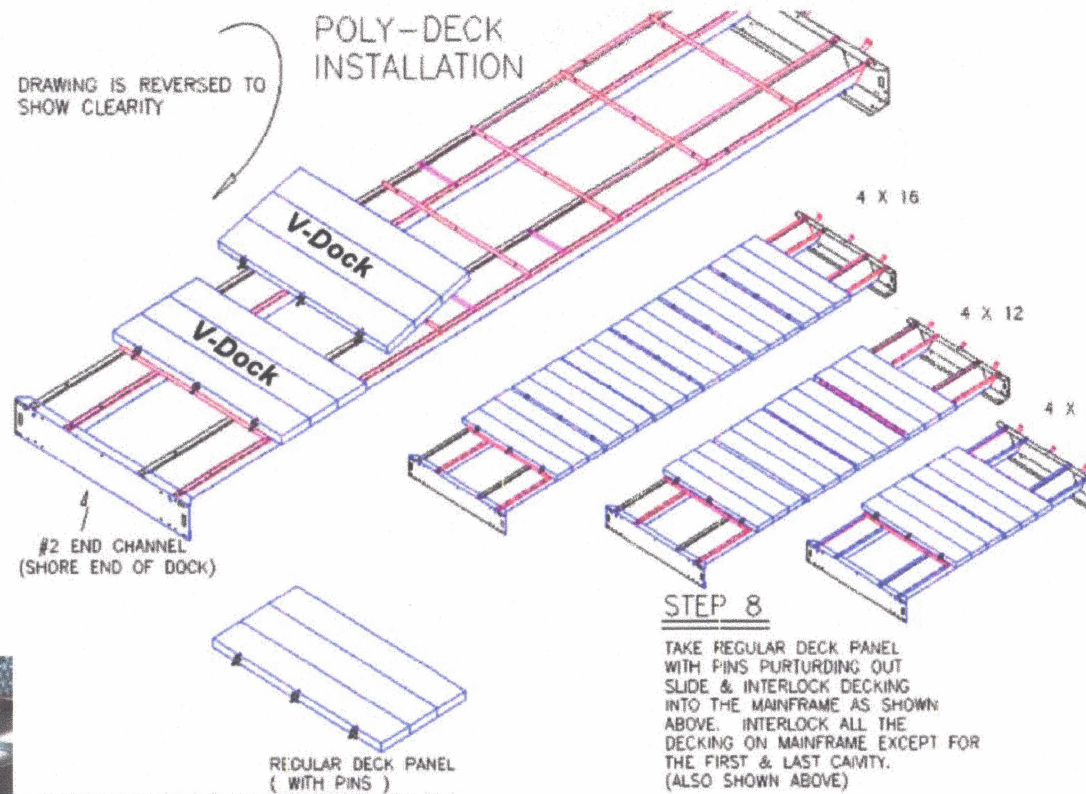



**Insert all regular
panels leave the
first & last cavities
open**

**Pins inserted in
crossmembers
as shown**


**Sundeck End
Facing Shore**

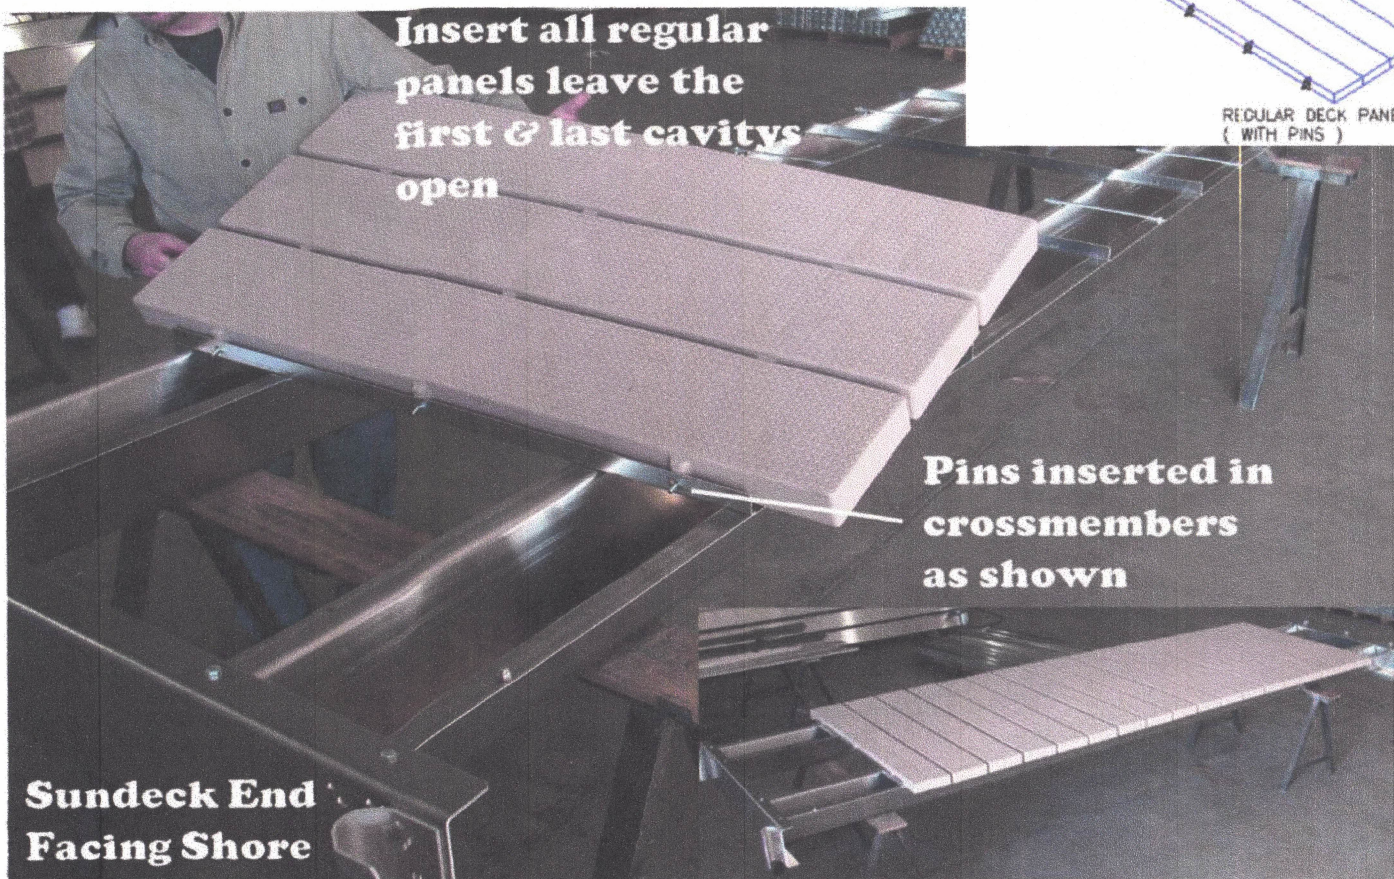

Insert the Starter Panels & Notched Panels as Shown

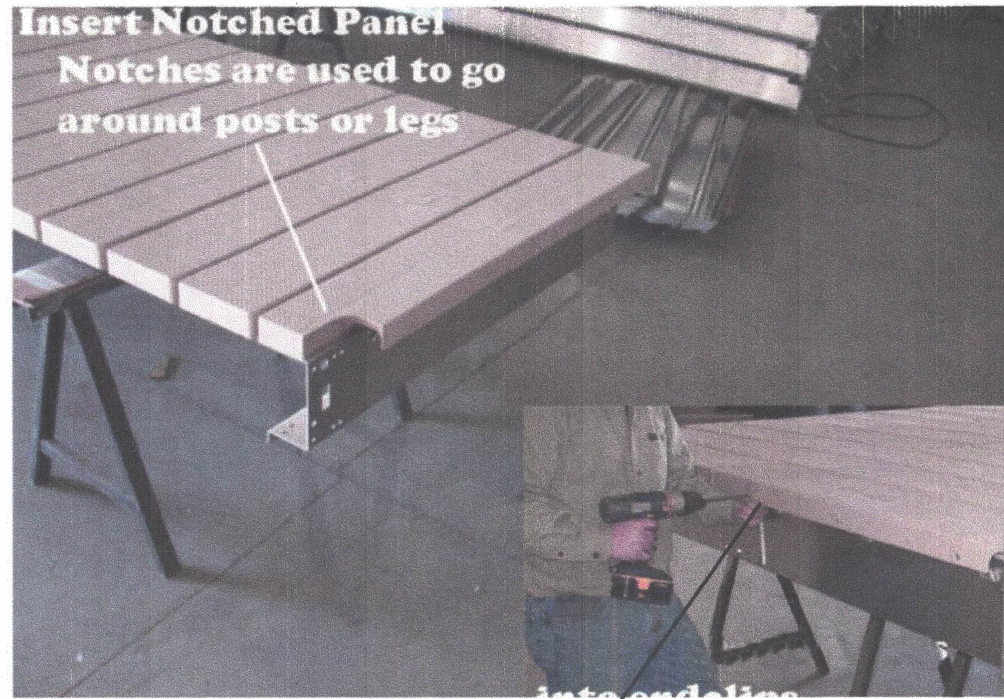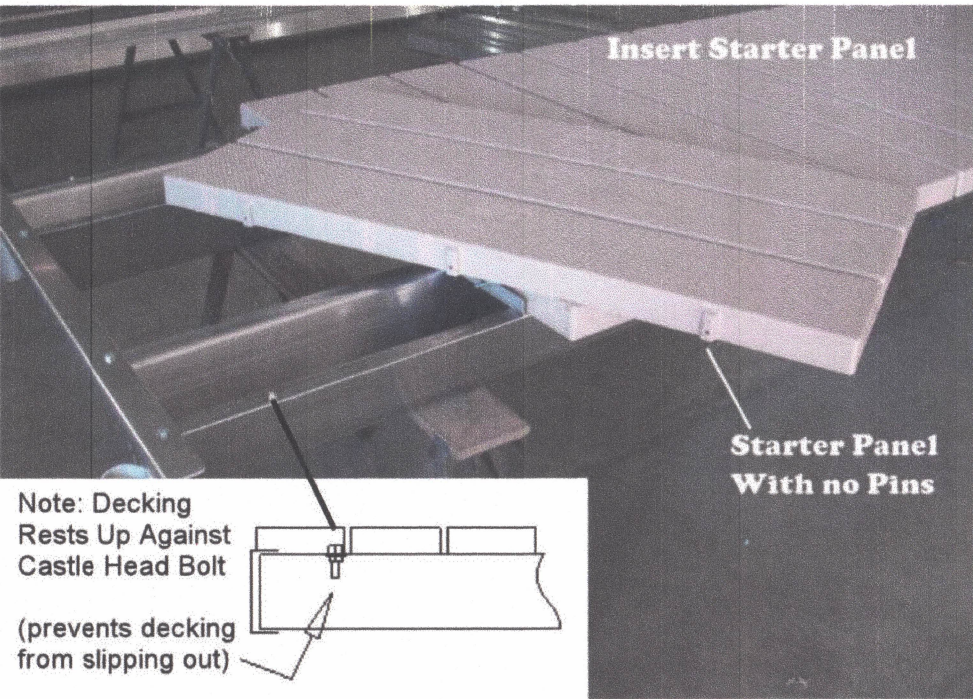


Screw all 12 Screws to Hold In Notched Panels

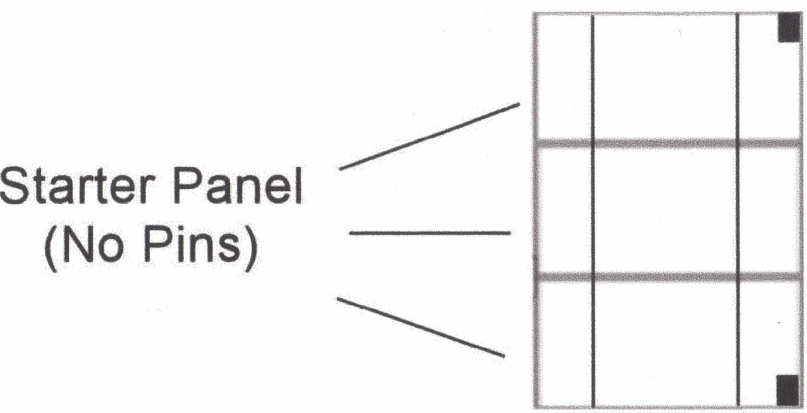

Left Notch Panel

Panel with No Notches

Right Notch Panel

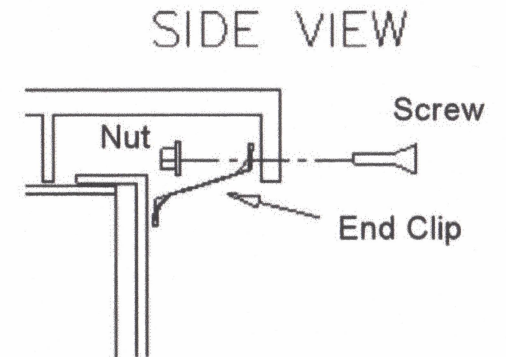

Shore End

Lake End

Turn clips and tighten to the framework as shown

**Turn all clips and
tighten with a 7/16"
socket wrench or
use a drill attachment**

