




Scan QR Code
For a Video Overview

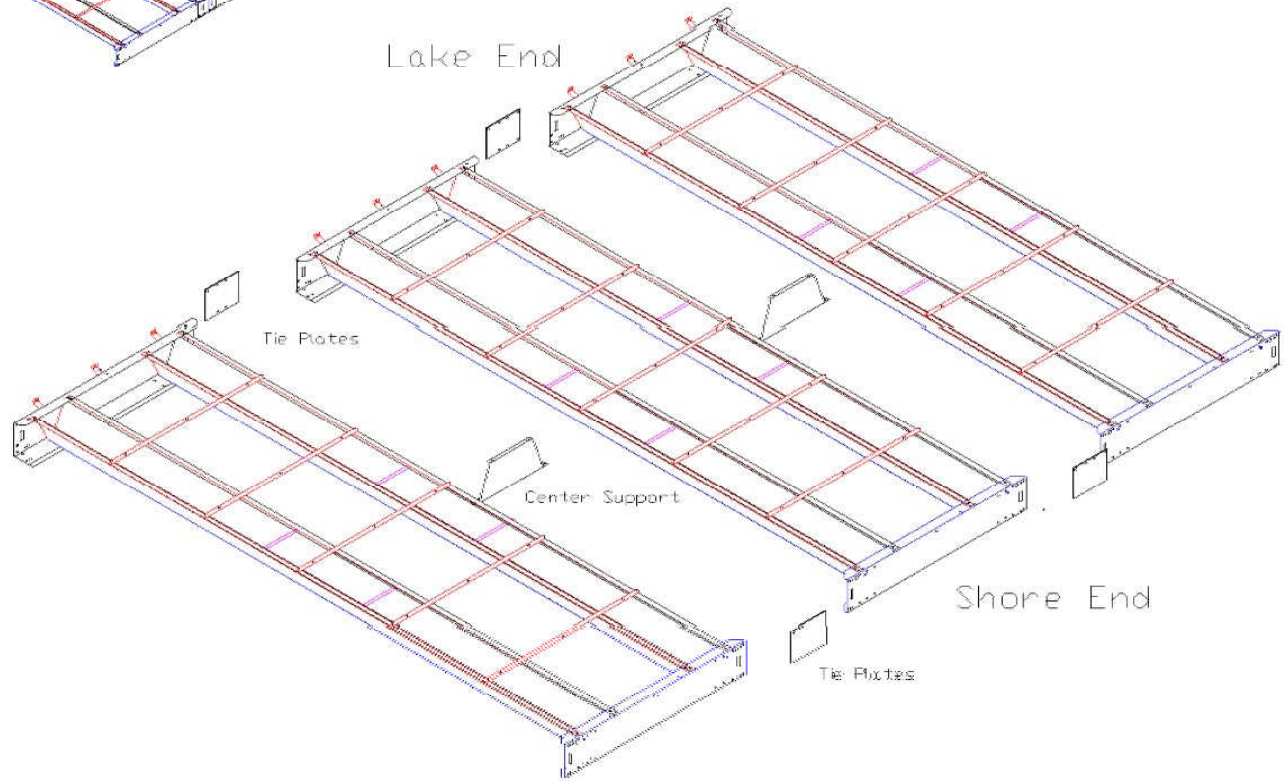





Triple Wide Sundeck Instructions

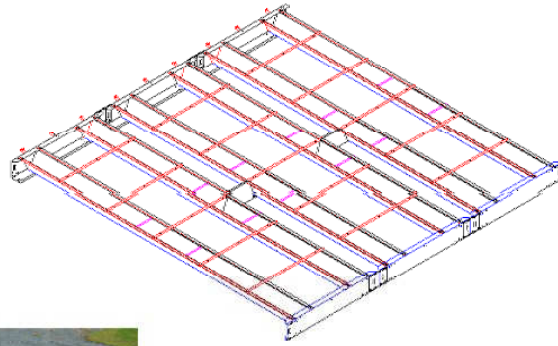

View of 2 frames already put together

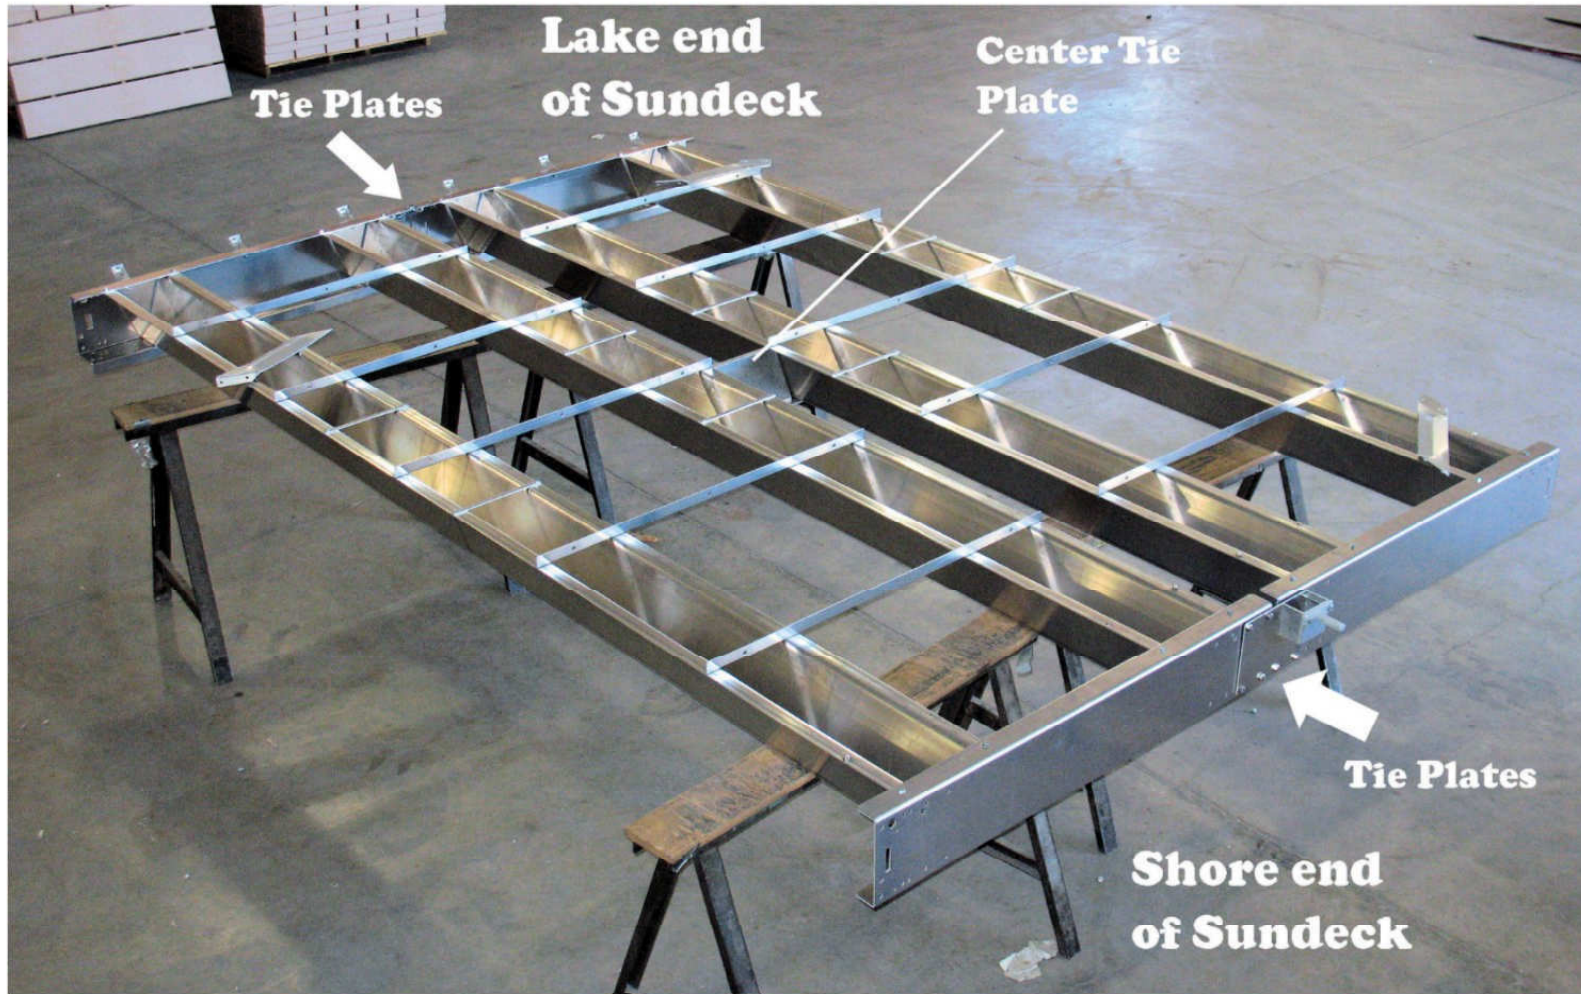

Leg Spacer & Connecting Pin Already Assembled (reference page only)

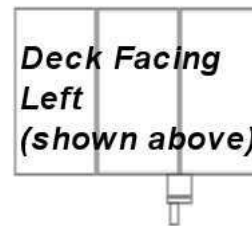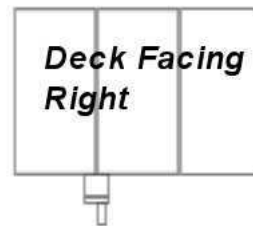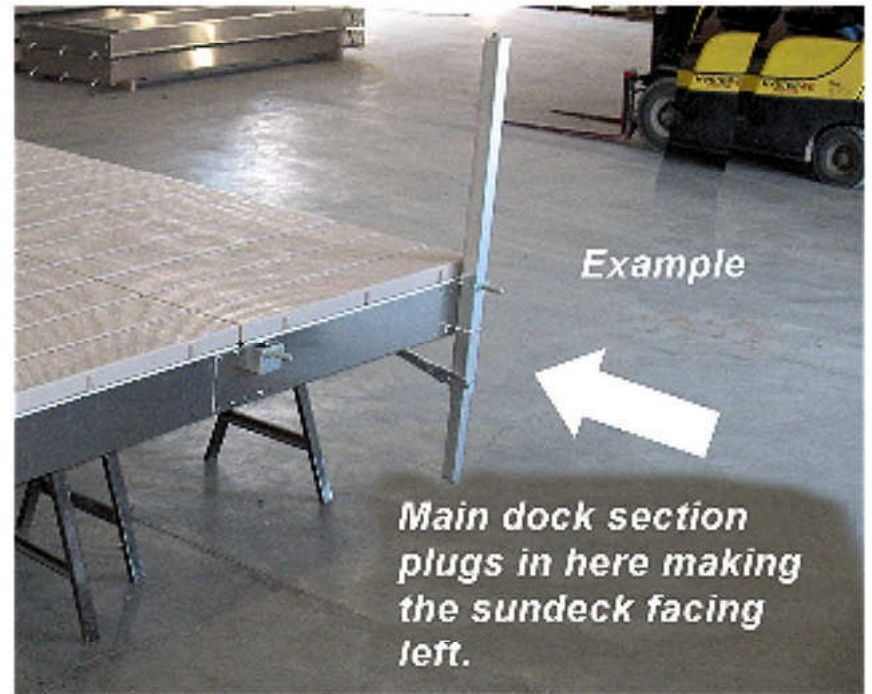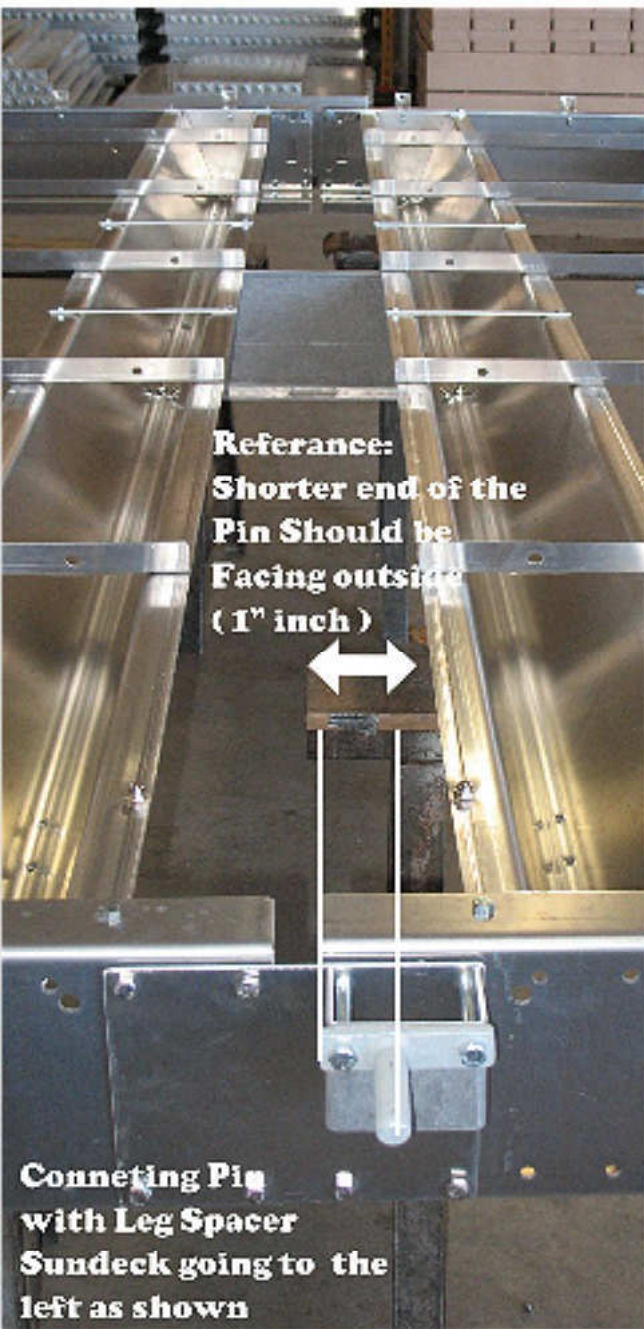


**Leg and decking
installed later....**





Bolt on the 3rd Section

Bolt on Center Support

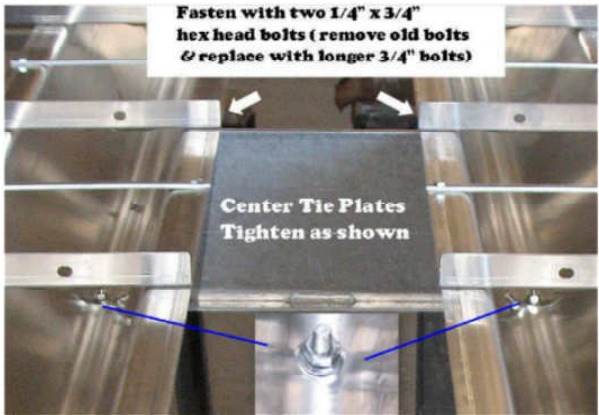

Bolt on Tie Plates

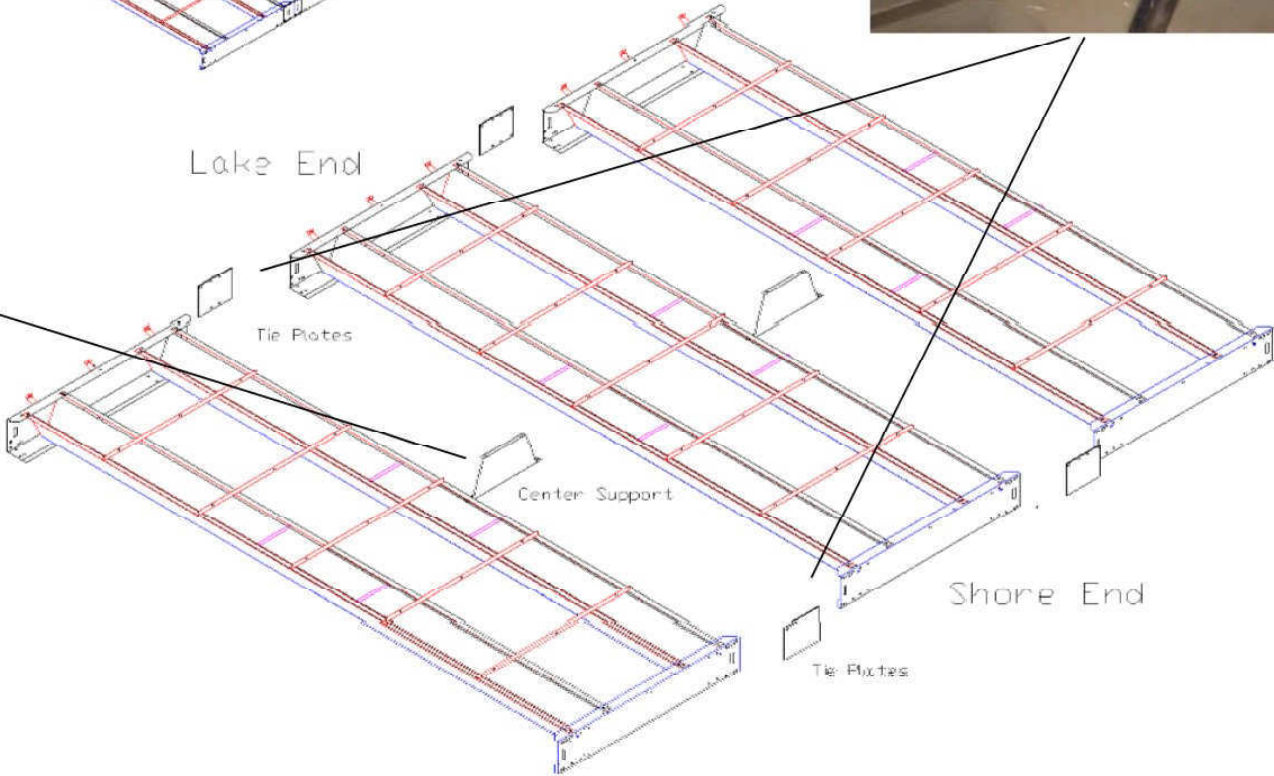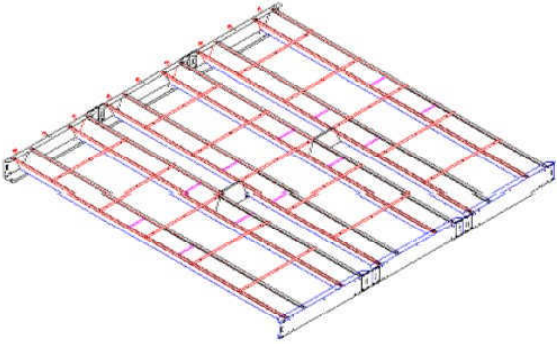


Tie Plate Orientation (2025 Update)

Small Hole on TOP as shown




Bolt on Leg Gussets and Loosley Fasten U-Bolts



Tighten 5/16 x 1" Hex Head Bolt, Washer & Nut so the Washer Conforms into a Radius as Shown

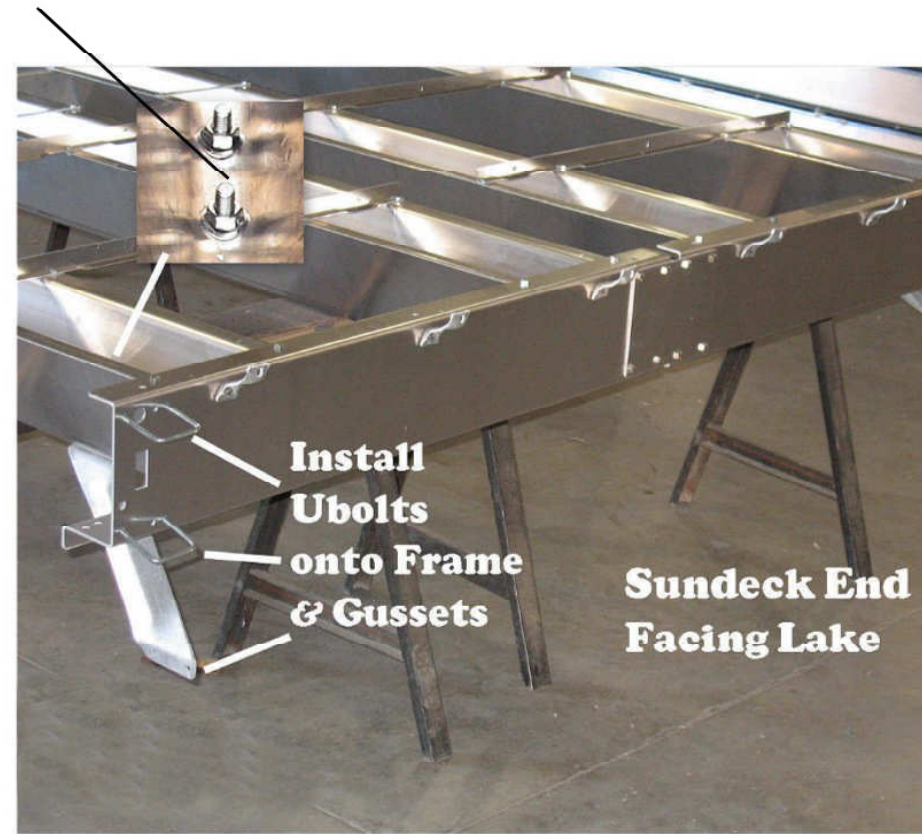

Note:
Location of the Gussets will be marked

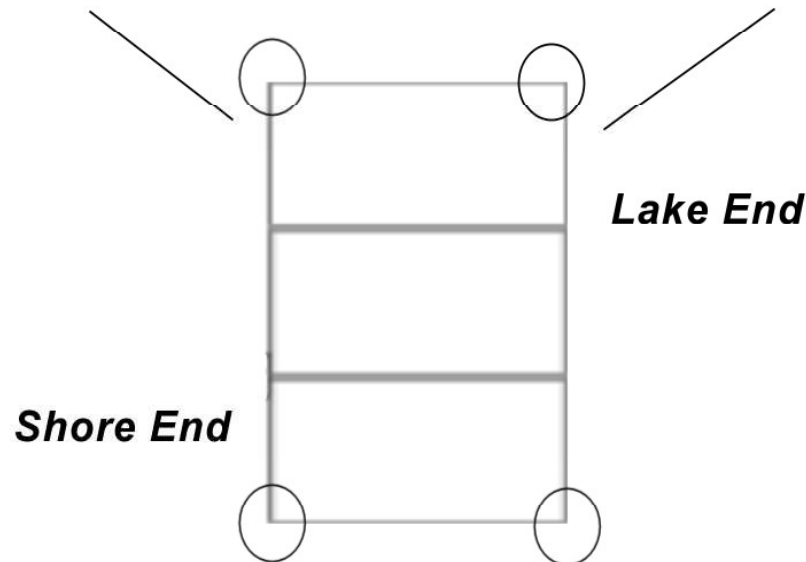

Slide Four Screw Drive Legs through the U-Bolts & Attach the Axle

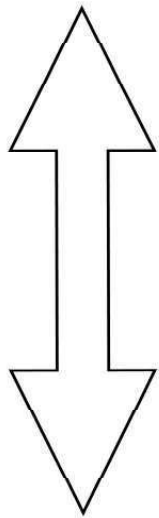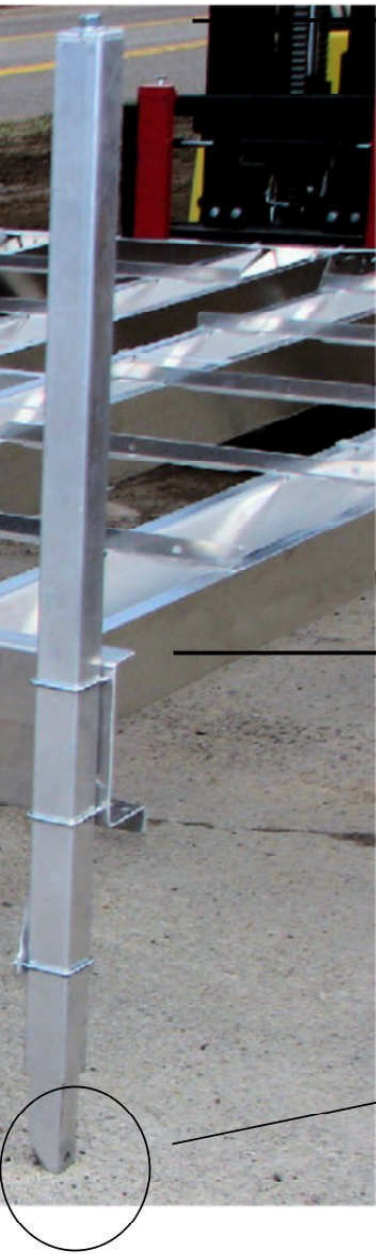

Measure about 28" - 32" from the top of the frame to the top of the leg.

Note: longer inner legs go to the lake end of the dock



Make Sure Angle is Facing the Center of the dock







Slide axle connection into the screw drive legs as shown above.

Slide the axle connection into the leg as shown. Tighten the spring bolt & lock nut until the threads of the bolt just goes beyond the lock not leaving the spring flexible.

Insert all the Regular Panels as Shown

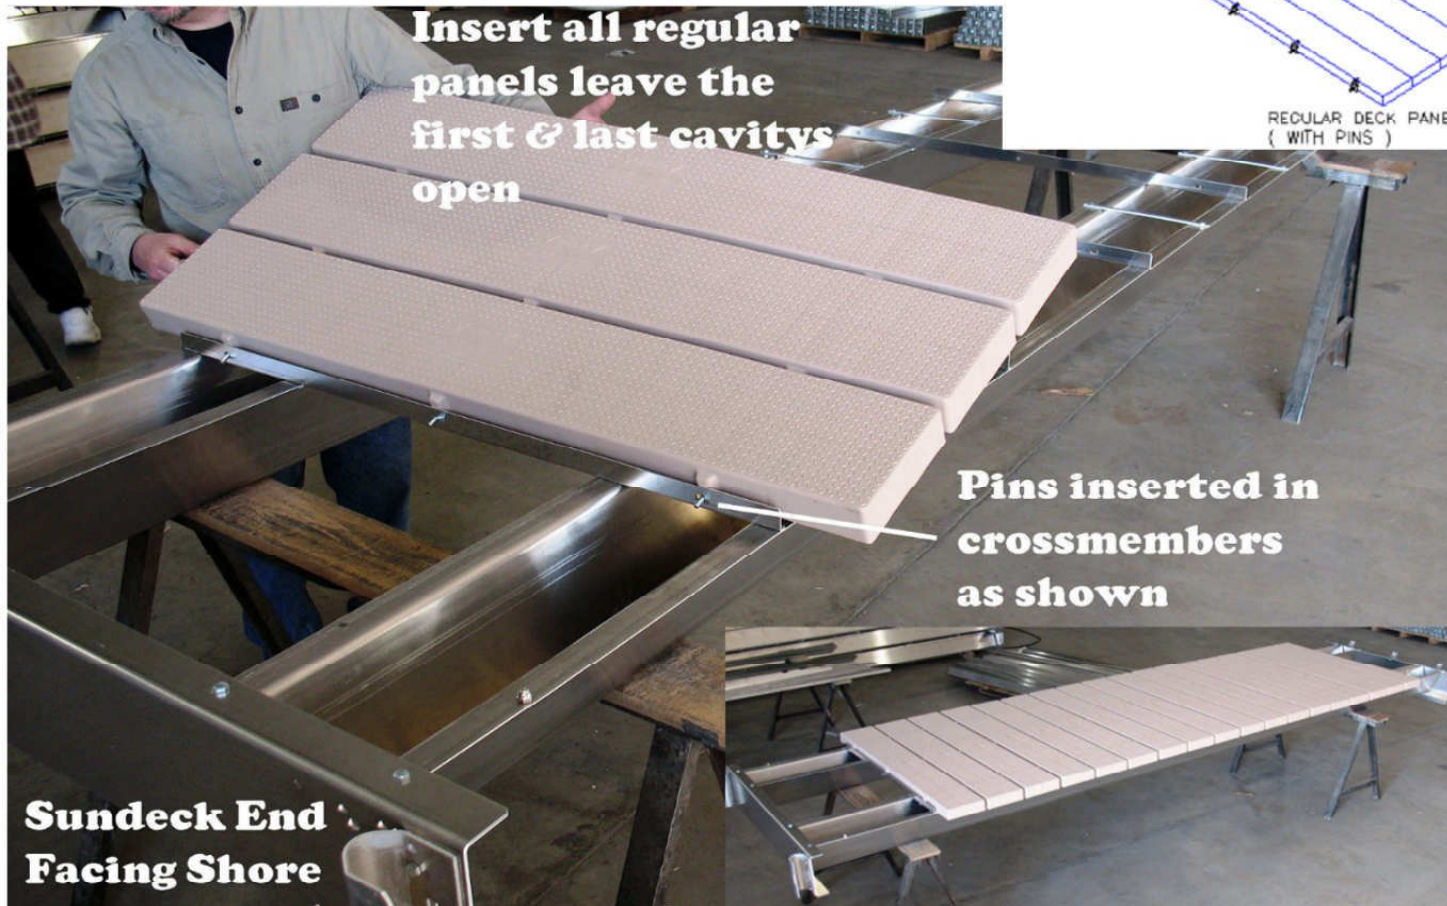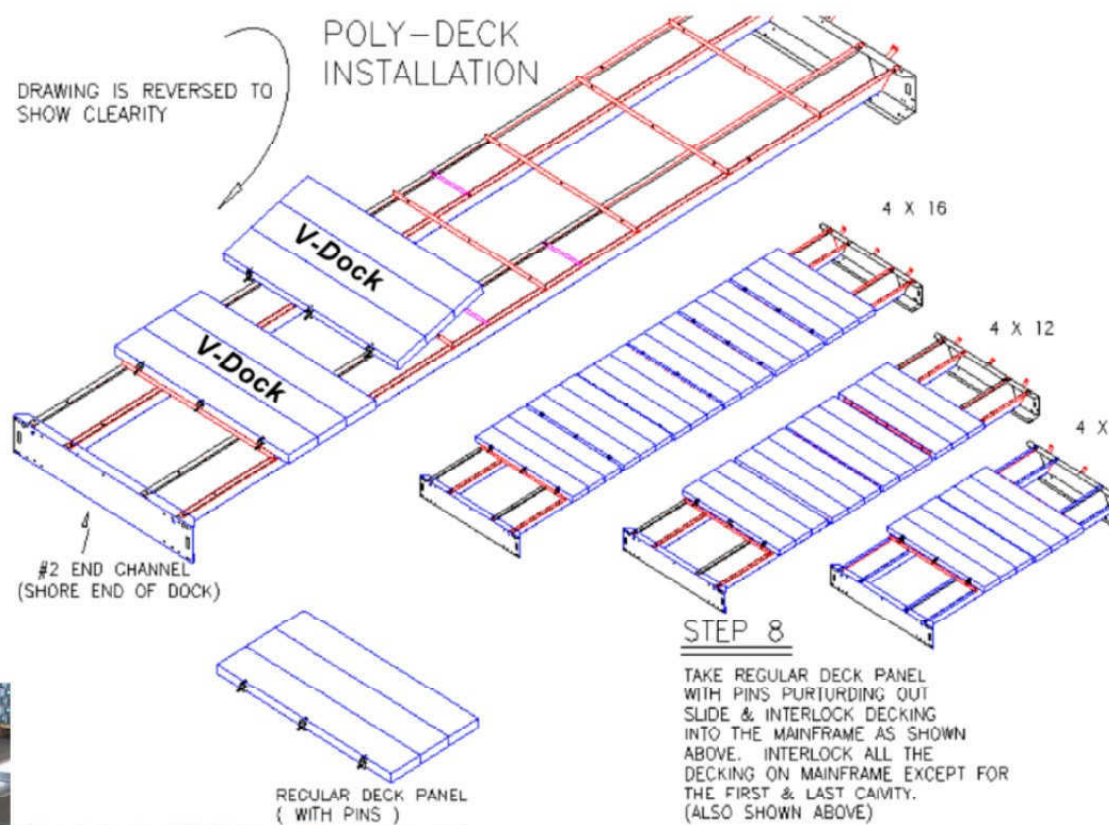

Insert the Starter Panels & Notched Panels as Shown

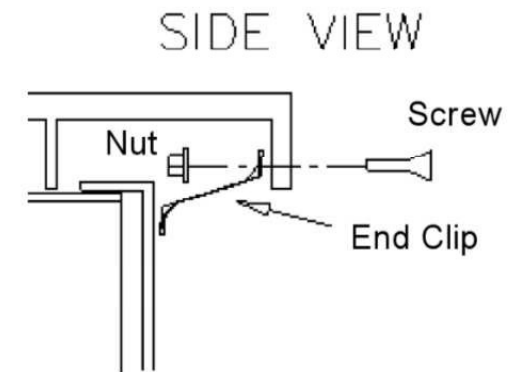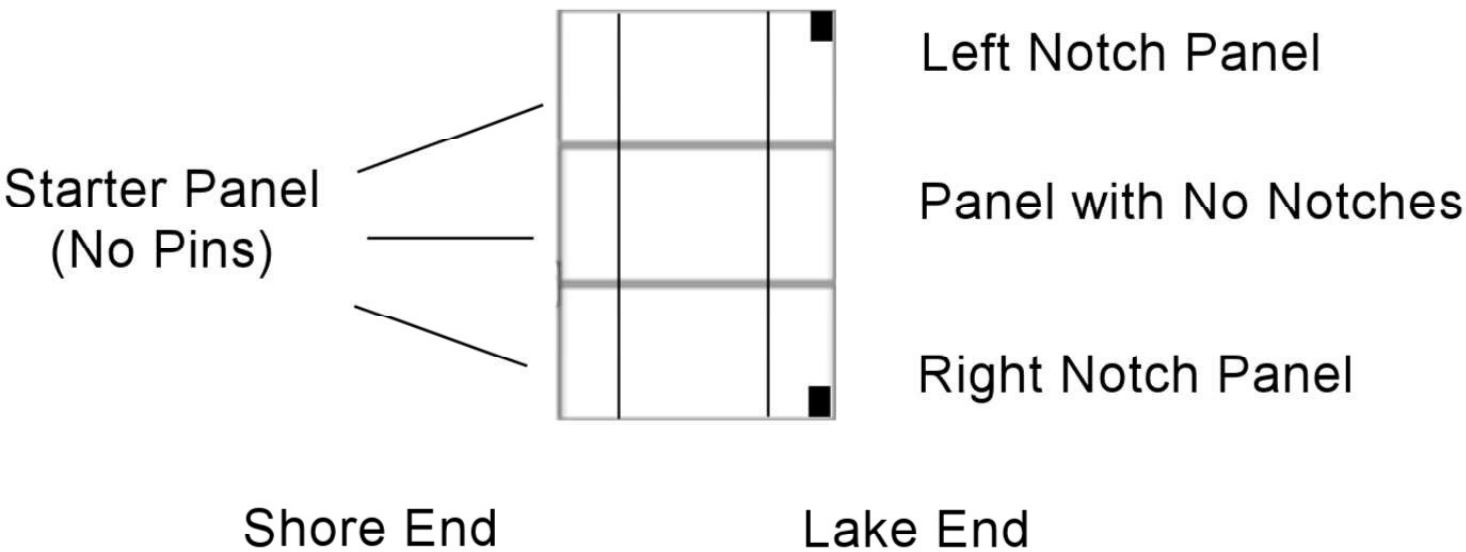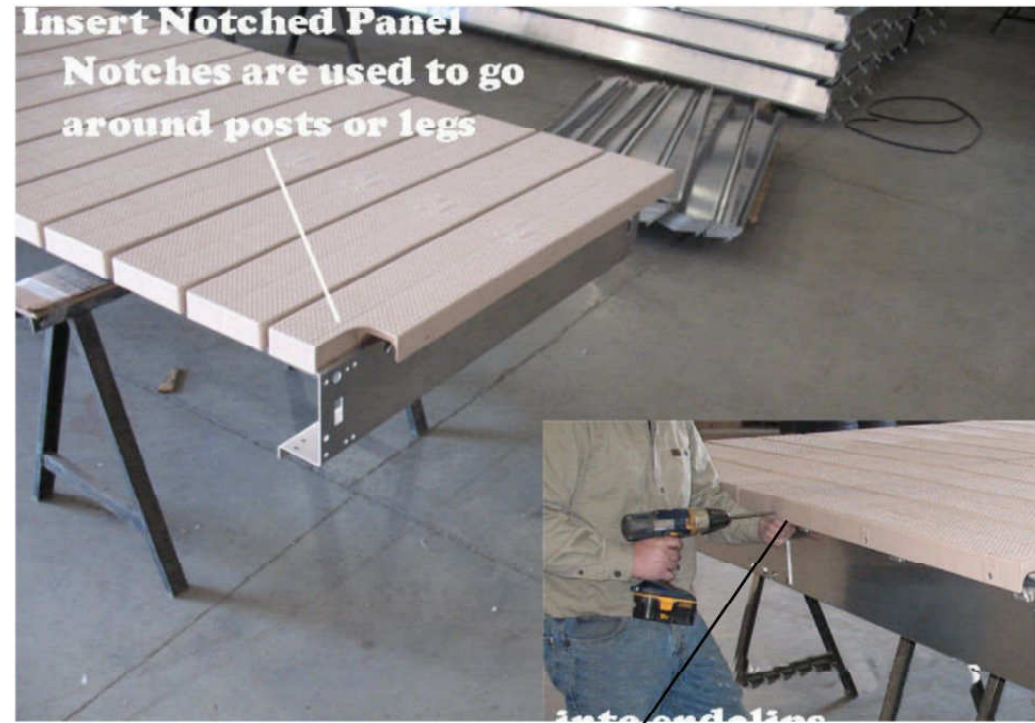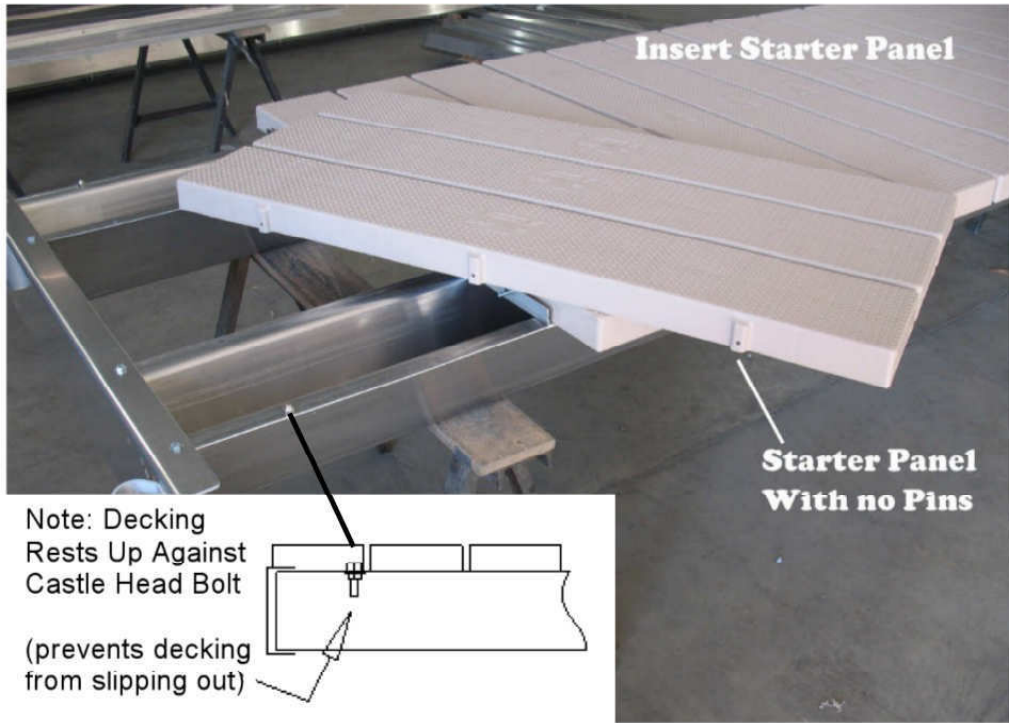

Turn clips and tighten to the framework as shown





Questions?
Call 651-464-3902